

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
A34 BSV EMS	Max Vehicle Speed
ABS Air	Repair Shop Code
ABS Air	Vehicle Id Number
AMT	Access Date
AMT	Workshop Code
Anti-Lock Breaking System	VIN data identifier
Anti-Lock Breaking System (Truck CRDI BSW)	VIN
Automatic Transmission System	VIN
Automatic Transmission System	Transmission Learning (Gearbox+ Clutch+ Gearbox Type)
Automatic Transmission System	Small Transmission Learning (Gearbox + Clutch)
Automatic Transmission System	Gearbox only learning
Automatic Transmission System	Clutch only learning
Bosch 17CV53	IMA Code
Bosch 17CV54	Low Idle Set Point
Bosch 17CV55	Max Vehicle Speed
Bosch 17CV56	PRV open count
Bosch 17CV57	PRV open duration
Bosch 17CV58	Starting Torque
Bosch 17CV59	Torque limit adjust value
Bosch 17CV60	Vehicle ID
Bosch common rail (EDC17CV44/54)	Air intake preheating
Bosch common rail (EDC17CV44/54)	Electronically controlled fan
Bosch common rail (EDC17CV44/54)	Speed signal source
Bosch common rail (EDC17CV44/54)	On-board diagnostic system check the power limit
Bosch common rail (EDC17CV44/54)	VIN
Bosch common rail (EDC17CV44/54)	Maximum vehicle speed
Bosch common rail (EDC17CV44/54)	OBD repair
Bosch common rail (EDC17CV44/54)	Certificate version number
Bosch common rail (EDC17CV44/54)	Engine number
Bosch common rail (EDC17CV44/54)	VIN (other parameter configuration)
Bosch common rail (EDC17CV44/54)	PRV opening times
Bosch common rail (EDC17CV44/54)	Software version number
Bosch common rail (EDC17CV44/54)	Certificate version number (Other configuration)
Bosch common rail (EDC17CV44/54)	Stop the first cylinder injector injection
Bosch common rail (EDC17CV44/54)	Stop the second cylinder injector injection
Bosch common rail (EDC17CV44/54)	Stop the third cylinder injector injection
Bosch common rail (EDC17CV44/54)	Stop the fourth cylinder injector injection
Bosch common rail (EDC17CV44/54)	Stop the fifth cylinder injector injection
Bosch common rail (EDC17CV44/54)	Stop the sixth cylinder injector injection
Bosch common rail (EDC17CV44/54)	Large injection quantity test
Bosch common rail (EDC17CV44/54)	Medium injection quantity test
Bosch common rail (EDC17CV44/54)	Small injection quantity test
Bosch common rail (EDC17CV44/54)	Leak Test of SCR system
Bosch common rail (EDC17CV44/54)	Offline test
Bosch common rail (EDC17CV44/54)	System emptying test
BSIII EMS	Service Date
BSIV CNG A34	Max Vehicle Speed
BSIV Diesel	Air Control Trimming
BSIV Diesel	Air Mass Trimming
BSIV Diesel	IMA Code
BSIV Diesel	Low Idle Set Point
BSIV Diesel	Max Vehicle Speed
BSIV Diesel	PRV open count
BSIV Diesel	PRV open duration
BSIV Diesel	Starting Torque
Denso Neptune	Engine Hours
Denso Neptune	IQA Cy Injector
Denso Neptune	Low Idle Set Point
Denso Neptune	Max Vehicle Speed
Denso Neptune	Programming Date
Denso Neptune	Service Date
Denso Neptune	Vehicle kilometers covered
Denso Neptune	VIN
DOST	I3C Inj Calibrate
DOST	Leak Detection
DOST	VIN Write
DOST DCM7. 1 (BS6)	VIN
DOST DCM7. 1 (BS6)	インジェクターIDコード登録
DOST DCM7. 1 (BS6)	Service Regeneration at Idle

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
DOST DCM7. 1 (BS6)	速度制限
DOST DCM7. 1 (BS6)	Cylinder Cut-Out
DOST DCM7. 1 (BS6)	圧縮テスト
DOST DCM7. 1 (BS6)	Pressure Control of Injection Rail
EDC15	Service Date
EDC16	Delta Engine Speed
EDC16	Max Vehicle Speed
EDC16	PRV Count
EDC16	PRV Duration
EDC16	Secondary Max Vehicle Speed
EDC16	Starting Torque
EDC16	Torque Limit Qty
EDC17	Grid Heater Act
EDC17	IMA Code Read
EDC17	Injectors 4 Cyl
EDC17	KM
EDC17	Maximum Speed
EDC17	Programming Date
EDC17	PRV open count
EDC17	PRV open duration
EDC17	PRV Reset
EDC17	Secondary Max speed
EDC17	Service Date
EDC17	Set Idle
EDC17	Set idle speed
EDC17	Starting Torque
EDC17	Torque limit
EDC17	Vehicle Identification Number
EDC17	Water-in-Fuel Reset
EDC 16 BS3	Air Heater
EDC 16 BS3	Cranking
EDC 16 BS3	Programming Date
EDC 16 BS3	PRV Reset
EDC 16 BS3	Service Date
EDC 16 BS3	Set Low Idle
EDC 16 BS3	Starting Torque
EDC 16 BS3	Torque limit
EDC 16 BS3	WIF Reset
EDC 16 BS4	Air Heater
EDC 16 BS4	Cranking
EDC 16 BS4	Programming Date
EDC 16 BS4	PRV Reset
EDC 16 BS4	Service Date
EDC 16 BS4	Set Low Idle
EDC 16 BS4	Starting Torque
EDC 16 BS4	Torque limit
EDC 16 BS4	WIF Reset
EDC 17 EGR	Grid Heater Act
EDC 17 EGR	Injectors 4 Cyl
EDC 17 EGR	KM
EDC 17 EGR	Programming Date
EDC 17 EGR	PRV Reset
EDC 17 EGR	Service Date
EDC 17 EGR	Set Idle
EDC 17 EGR	Starting Torque
EDC 17 EGR	Torque limit
EDC 17 SCR	Grid Heater Act
EDC 17 SCR	Injectors 4 Cyl
EDC 17 SCR	KM
EDC 17 SCR	Programming Date
EDC 17 SCR	PRV Reset
EDC 17 SCR	Service Date
EDC 17 SCR	Set Idle
EDC 17 SCR	Starting Torque
EDC 17 SCR	Torque limit
Electrical Power Assisted Steering (1. 5L BSVI (DCM 7.1))	VIN
Electrical Power Assisted Steering (1. 5L BSVI (DCM 7.1))	Injector Coding
Electrical Power Assisted Steering (1. 5L BSVI (DCM 7.1))	Service Regeneration at Idle
Electrical Power Assisted Steering (1. 5L BSVI (DCM 7.1))	SPCS Test

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	VGTH Actuator Clean Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	VGTH Actuator Learn Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset Lean Nox Trap (LNT) Values
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset WRAF1 / WRAF2 Values
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset Throttle Values
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset EGRH Values
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset Rail Pressure Sensor Values
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Lean Nox Trap DESOX Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Rail Pressure Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	IMV Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 1 Shut off test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 2 Shut off test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 3 Shut off test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 4 Shut off test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Power Balance Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 1 Buzzing test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 2 Buzzing test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 3 Buzzing test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Injector 4 Buzzing test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Hydraulic Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Compression Leak Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	MDP Update Period Adjustment
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Fan Actuator 1
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Fan Actuator 2
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Starter Relay Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	IMV Buzzing Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	A/C Compressor Relay Working Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Glow Plugs
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Malfunction Indicator Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Glow Plug Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Immoniliser Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	DPF Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Battery Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Check Engine Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Water in Fuel Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Regeneration Inhibit Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Regeneration Warning Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Regeneration Active Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Fuel Heater Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Cruise Control Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	ESC Lamp Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset Injectors Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset IMV Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset HP Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset AMF Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset APS Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset DPF Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset DP Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset Excessive Regeneration Fault Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	EGRH Actuator Clean Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	EGRH Actuator Learn Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset EGR Position Learning Values Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Throttle Valve Actuator Clearing Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset VGTH Learn Value Test
Electrical Power Assisted Steering (1.5L BSVI (DCM 7.1))	Reset ETH Learn Value Test
Electrical Power Assisted Steering (700 CC BSVI)	VIN
Electrical Power Assisted Steering (700 CC BSVI)	Calibrate Steering Angle meso-position
Electrical Power Assisted Steering (700 CC BSVI)	Erase Steering Angle meso-position data
Electrical Power Assisted Steering (800 CC BSVI)	VIN
Electrical Power Assisted Steering (800 CC BSVI)	Calibrate Steering Angle meso-position
Electrical Power Assisted Steering (800 CC BSVI)	Erase Steering Angle meso-position data
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	VIN
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector Coding
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Service Regeneration at Idle
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	SPCS Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	VGTH Actuator Clean Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	VGTH Actuator Learn Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset Lean Nox Trap (LNT) Values
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset WRAF1 / WRAF2 Values

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset Throttle Values
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset EGRH Values
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset Rail Pressure Sensor Values
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Lean Nox Trap DESOX Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Rail Pressure Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	IMV Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 1 Shut off test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 2 Shut off test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 3 Shut off test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 4 Shut off test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Power Balance Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 1 Buzzing test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 2 Buzzing test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 3 Buzzing test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Injector 4 Buzzing test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Hydraulic Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Compression Leak Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	MDP Update Period Adjustment
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Fan Actuator 1
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Fan Actuator 2
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Starter Relay Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	IMV Buzzing Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	A/C Compressor Relay Working Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Glow Plugs
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Malfunction Indicator Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Glow Plug Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Immoniliser Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	DPF Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Battery Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Check Engine Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Water in Fuel Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Regeneration Inhibit Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Regeneration Warning Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Regeneration Active Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Fuel Heater Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Cruise Control Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	ESC Lamp Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset Injectors Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset IMV Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset HP Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset AMF Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset APS Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset DPF Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset DP Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset Excessive Regeneration Fault Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	EGRH Actuator Clean Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	EGRH Actuator Learn Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset EGR Position Learning Values Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Throttle Valve Actuator Clearing Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset VGTH Learn Value Test
EMS (Engine Management System) (1.5L BSVI (DCM 7.1))	Reset ETH Learn Value Test
EMS (Engine Management System) (407 - BS4 (Dephi DCM2.5))	I3C Code Read/Write
EMS (Engine Management System) (407 - BS4 (Dephi DCM2.5))	Leak Detection Test
EMS (Engine Management System) (407 - BS4 (Dephi DCM2.5))	Write VIN
EMS (Engine Management System) (600 CC Di- IRIS/ZIP)	Read and Write IMA / I2C Code(s)
EMS (Engine Management System) (600 CC Di- IRIS/ZIP)	Write VIN
EMS (Engine Management System) (700 CC BSVI)	VIN
EMS (Engine Management System) (700 CC BSVI)	Injector Coding
EMS (Engine Management System) (700 CC BSVI)	Pariculate Filter Service Regeneration
EMS (Engine Management System) (700 CC BSVI)	Pressure preperation test
EMS (Engine Management System) (700 CC BSVI)	Dosing quantity test
EMS (Engine Management System) (700 CC BSVI)	Static dosing quantity test
EMS (Engine Management System) (700 CC BSVI)	Dynamic dosing quantity test
EMS (Engine Management System) (700 CC BSVI)	Spray test
EMS (Engine Management System) (700 CC BSVI)	Backflow pump test
EMS (Engine Management System) (700 CC BSVI)	Emptying of SCR system
EMS (Engine Management System) (700 CC BSVI)	Leak Test of SCR system
EMS (Engine Management System) (700 CC BSVI)	First filling test
EMS (Engine Management System) (700 CC BSVI)	Engine test Dosing Valve dry actuation

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
EMS (Engine Management System) (700 CC BSVI)	Vehicle configuration Number
EMS (Engine Management System) (800 CC BSVI)	VIN
EMS (Engine Management System) (800 CC BSVI)	Injector Coding
EMS (Engine Management System) (800 CC BSVI)	Pariculate Filter Service Regeneration
EMS (Engine Management System) (800 CC BSVI)	Pressure preperation test
EMS (Engine Management System) (800 CC BSVI)	Dosing quantity test
EMS (Engine Management System) (800 CC BSVI)	Static dosing quantity test
EMS (Engine Management System) (800 CC BSVI)	Dynamic dosing quantity test
EMS (Engine Management System) (800 CC BSVI)	Spray test
EMS (Engine Management System) (800 CC BSVI)	Backflow pump test
EMS (Engine Management System) (800 CC BSVI)	Emptying of SCR system
EMS (Engine Management System) (800 CC BSVI)	Leak Test of SCR system
EMS (Engine Management System) (800 CC BSVI)	First filling test
EMS (Engine Management System) (800 CC BSVI)	Engine test Dosing Valve dry actuation
EMS (Engine Management System) (800 CC BSVI)	Vehicle configuration Number
EMS (Engine Management System) (800 CC Di- MEGA/MEGA XL BS4)	Read and Write IMA / I2C Code (s)
EMS (Engine Management System) (800 CC Di- MEGA/MEGA XL BS4)	Write VIN
EMS (Engine Management System) (1109G - CNG BSV (SGI))	Write VIN
EMS (Engine Management System) (1109G - CNG BSV (SGI))	EGR Valve Reset
EMS (Engine Management System) (1109G - CNG BSV (SGI))	Intake Throttle Valve Reset
EMS (Engine Management System) (1109G - CNG BSV (SGI))	Accelerator Pedal Reset
EMS (Engine Management System) (1109G - CNG BSV (SGI))	Long Term Fuel Trim Reset
EMS (Engine Management System) (PICKUP - 207 DI BS-IV)	I3C Code Read/Write
EMS (Engine Management System) (PICKUP - 207 DI BS-IV)	Max Vehicle Speed
EMS (Engine Management System) (PICKUP - 207 DI BS-IV)	Write VIN
EMS (Engine Management System) (Super Ace Mint)	Leak Detection Test
EMS (Engine Management System) (Super Ace Mint)	Read C2I Data
EMS (Engine Management System) (Super Ace Mint)	Write C2I Data
EMS (Engine Management System) (Super Ace Mint)	Write VIN
EMS (Engine Management System) (Truck CRDI BSW)	VIN
H3 K-line	Leak Detection
H4 K-line	Leak Detection
Instrument Cluster IIL - Ultra	VIN
Instrument Cluster IIL - Ultra	Date of last programming
Instrument Cluster IIL - Ultra	Hour Meter write
Instrument Cluster IIL - Ultra	Reset Service Reminder Service
Instrument Cluster IIL-ERGOPACK	VIN
Instrument Cluster IIL-ERGOPACK	Date of last programming
Instrument Cluster IIL-ERGOPACK	Hour Meter write
Instrument Cluster IIL-ERGOPACK	Reset Service Reminder Service
Instrument Cluster System	VIN
Telematic Module (1109G - CNG BSV (SGI))	Write VIN
Telematics Control Unit	VIN
Telematics Control Unit	Vehicle configuration Number
Telematics Control Unit	Emmision Type
Vehicle (BSIII Cluster)	Engine Run Hours
Vehicle (BSIII Cluster)	K-factor
Vehicle (BSIII Cluster)	Odometer
Vehicle (BSIII Cluster)	VIN
Vehicle (BSIV Cluster)	Air Prressure Gauge 1
Vehicle (BSIV Cluster)	Air Pressure Gauge 2
Vehicle (BSIV Cluster)	ECU Reset
Vehicle (BSIV Cluster)	Engine Run
Vehicle (BSIV Cluster)	Flashing
Vehicle (BSIV Cluster)	Fuel Tank Capacity
Vehicle (BSIV Cluster)	K Factor
Vehicle (BSIV Cluster)	LCD Display
Vehicle (BSIV Cluster)	Main Odo Distance
Vehicle (BSIV Cluster)	Over Speed Warning
Vehicle (BSIV Cluster)	Speedo Gauge
Vehicle (BSIV Cluster)	Tacho Gauge
Vehicle (BSIV Cluster)	Tell Tales 1
Vehicle (BSIV Cluster)	Tell Tales 2
Vehicle (BSIV Cluster)	Vehicle Manufacturing Date
Vehicle (BSIV Cluster)	VIN Current
Vehicle (BSIV Cluster)	VIN Odometer
Vehicle (BSIV Cluster)	VIN Odometer Limit
インストルメントクラスター (1.5L BSVI (DCM 7.1))	VIN
インストルメントクラスター (1.5L BSVI (DCM 7.1))	Service Information Reset

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
インストルメントクラスター (700 CC BSVI)	VIN
インストルメントクラスター (700 CC BSVI)	Service Information Reset
インストルメントクラスター (800 CC BSVI)	VIN
インストルメントクラスター (800 CC BSVI)	Service Information Reset
インストルメントクラスター (1109G - CNG BSV (SG1))	Write VIN
インストルメントクラスター (1109G - CNG BSV (SG1))	Service Intervals Indicator Reset
エンジン (1212/1512 BSV (EDC 3.3))	VIN
エンジン (1212/1512 BSV (EDC 3.3))	Injector Coding
エンジン (1212/1512 BSV (EDC 3.3))	Spray test
エンジン (1212/1512 BSV (EDC 3.3))	Backflow pump test
エンジン (1212/1512 BSV (EDC 3.3))	Leak Test of SCR system
エンジン (1212/1512 BSV (EDC 3.3))	High pressure test
エンジン (1212/1512 BSV (EDC 3.3))	Dosing Quantity Test from tester
エンジン (1212/1512 BSV (EDC 3.3))	Emptying Test
エンジン (1212/1512 BSV (EDC 3.3))	Pressure Preparation Test
エンジン (1212/1512 BSV (EDC 3.3))	Dynamic Dosing Quantify Test from Calibration
エンジン (1212/1512 BSV (EDC 3.3))	Static Dosing Wuanntity Test from Calibration
エンジン (1212/1512 BSV (EDC 3.3))	Medium mass flow and dosing quantity test
エンジン (1212/1512 BSV (EDC 3.3))	First filling test
エンジン (1212/1512 BSV (EDC 3.3))	Dosing valve dry actuation
エンジン (1212/1512 BSV (EDC 3.3))	EOL command combining first filling, pressure preparation and emptying test
エンジン (1212/1512 BSV (EDC 3.3))	Idle Regeneration
エンジン (1212/1512 BSV (EDC 3.3))	Injector Valve Adjustment raw values for all injectors
エンジン (1212/1512 BSV (EDC 3.3))	Wear out opening counter of PRV implemented using AVS
エンジン (1212/1512 BSV (EDC 3.3))	Wear out timer of PRV open time implemented using AVS
エンジン (1212/1512 BSV (EDC 3.3))	EEP MEUNADAPT CRV DATA
エンジン (1212/1512 BSV (EDC 3.3))	UDC DosQnt
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine to set and reset the EOL service informations
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine reset the time overtemperature
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine for resetting the offset Factor
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine for governor deviation between nominal pressure and currently modelled system pressure (DnoxSA pDifSysNom)
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine to read and write the collected system information
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine to set the Tank-level
エンジン (1212/1512 BSV (EDC 3.3))	AVS routine to read and write the number of replacement functions of pressure reduction (SCR Mon nrPRednRepl)
エンジン (1212/1512 BSV (EDC 3.3))	Noncontinuous soot mass
エンジン (1212/1512 BSV (EDC 3.3))	Continuous soot mass
エンジン (1212/1512 BSV (EDC 3.3))	Max thresholds for convered distance since last successful regeneration
エンジン (1212/1512 BSV (EDC 3.3))	Engine operation time thresholds for regeneration
エンジン (1412 BSV (EDC17))	VIN
エンジン (1412 BSV (EDC17))	Injector Coding
エンジン (BSIII EMS)	Bosch ECU HW PART No
エンジン (BSIII EMS)	Dataset ID
エンジン (BSIII EMS)	Engine Serial No
エンジン (BSIII EMS)	IMA Code
エンジン (BSIII EMS)	Low Idle Set Point
エンジン (BSIII EMS)	Low Idle speed demand for A/C
エンジン (BSIII EMS)	Max Vehicle Speed
エンジン (BSIII EMS)	Mode 0 target speed for PTO
エンジン (BSIII EMS)	Mode 1 target speed for PTO
エンジン (BSIII EMS)	Mode 2 target soeed for PTO
エンジン (BSIII EMS)	Mode 3 target speed for PTO
エンジン (BSIII EMS)	Program Shop Code
エンジン (BSIII EMS)	PRV open count
エンジン (BSIII EMS)	PRV open duration
エンジン (BSIII EMS)	Starting Torque
エンジン (BSIII EMS)	Torque limit Multiplicative
エンジン (BSIII EMS)	Vehicle Id No
エンジン (BSIV EMS)	Dateset ID
エンジン (BSIV EMS)	DICV Part No
エンジン (BSIV EMS)	Engine Serial No
エンジン (BSIV EMS)	IMA Code
エンジン (BSIV EMS)	Max Vehicle Speed
エンジン (BSIV EMS)	Program Shop Code
エンジン (BSIV EMS)	PRV open count
エンジン (BSIV EMS)	PRV open duration
エンジン (BSIV EMS)	Starting Torque
エンジン (BSIV EMS)	Torque limit Multiplicative

●アジアトラック (Asian Tracks) 作業サポート (Ver 2023.06)

システム名	項目名
エンジン (BSⅣ EMS)	Vehicle ID
エンジン (BSⅣ EMS)	Write Histor Map Timers
エンジン (LPO 1612 TC BS-3 6BT 5.9 Turbo)	Idle Speed Adjustment
エンジン (LPO 1612 TC BS-3 6BT 5.9 Turbo)	Multiplicative Limit Quantity
エンジン (LPO 1612 TC BS-3 6BT 5.9 Turbo)	Start Quantity Correction
エンジン (WEI CHAI Ⅲ (WP5))	Idling micro-adjust
エンジン (WEI CHAI Ⅲ (WP6))	Idling micro-adjust
エンジン (WEI CHAI Ⅲ (WP7))	Idling micro-adjust
エンジン (WEI CHAI Ⅲ (WP12))	Idling micro-adjust
ディーゼル (BSⅢ 4 Cyl)	Engine Idling Speed
ディーゼル (BSⅢ 4 Cyl)	Fuel Limit Quantity
ディーゼル (BSⅢ 4 Cyl)	Injection Angle
ディーゼル (BSⅢ 4 Cyl)	Max Vehicle Speed
ディーゼル (BSⅢ 4 Cyl)	Service Date
ディーゼル (BSⅢ 4 Cyl)	Starting Fuel Quantity
ディーゼル (BSⅢ 4 Cyl)	VIN
ディーゼル (BSⅢ 6 Cyl)	Engine Idling Set Point
ディーゼル (BSⅢ 6 Cyl)	Max Vehicle Speed
ディーゼル (BSⅢ 6 Cyl)	PRV open count
ディーゼル (BSⅢ 6 Cyl)	PRV open duration
ディーゼル (BSⅢ 6 Cyl)	Starting Torque
ディーゼル (BSⅢ 6 Cyl)	Torque limit value
ディーゼル (BSⅣ 4 Cyl)	Delta Engine Speed
ディーゼル (BSⅣ 4 Cyl)	Max Vehicle Speed
ディーゼル (BSⅣ 4 Cyl)	PRV Count
ディーゼル (BSⅣ 4 Cyl)	PRV Duration
ディーゼル (BSⅣ 4 Cyl)	Starting Torque
ディーゼル (BSⅣ 4 Cyl)	Torque limit value