

●フォードヨーロッパ 作業サポート (Ver 2023.10)

システム名	項目名
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Configure the yaw rate sensor
ABS (Anti-Lock Brake System)	Module initialization
ABS (Anti-Lock Brake System)	Rear Brake Adjustment
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Configure the yaw rate sensor
ABS (Anti-Lock Brake System)	Module initialization
ABS (Anti-Lock Brake System)	Valve Calibration
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change
ABS (Anti-Lock Brake System)	Rear Brake Adjustment
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Configure the steering angle sensor
ABS (Anti-Lock Brake System)	Rear Brake Adjustment
ABS (Anti-Lock Brake System)	ABS Module Initialization
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Configure the yaw rate sensor
ABS (Anti-Lock Brake System)	Module initialization
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change
ABS (Anti-Lock Brake System)	Rear Brake Adjustment
ABS (Anti-Lock Brake System)	Key On Engine Off Self Test
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS (Anti-Lock Brake System)	ABS/ESP Service Bleed
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Configure the steering angle sensor
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS (Anti-Lock Brake System)	ABS/ESP Service Bleed
ABS (Anti-Lock Brake System)	ESP Configure All Three sensors Together.
ABS (Anti-Lock Brake System)	ESP Configure the pressure sensor
ABS (Anti-Lock Brake System)	ESP Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
ABS (Anti-Lock Brake System)	ESP Calibrate longitudinal Acceleration Sensor
ABS (Anti-Lock Brake System)	ESP Inhibit longitudinal Accelerometer Monitoring
ABS (Anti-Lock Brake System)	Module installation
ABS (Anti-Lock Brake System)	Key On Engine Off Self Test
ABS (Anti-Lock Brake System)	IVD Initialization Sequence
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS (Anti-Lock Brake System)	Inlet Valve Calibration
ABS (Anti-Lock Brake System)	Isolation Valve Calibration
ABS (Anti-Lock Brake System)	ON-Demand Self test
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change

●フォードヨーロッパ 作業サポート (Ver 2023.10)

システム名	項目名
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Key On Engine Off Self Test
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS (Anti-Lock Brake System)	IVD Initialization Sequence
ABS (Anti-Lock Brake System)	Inlet Valve Calibration
ABS (Anti-Lock Brake System)	Isolation Valve Calibration
ABS (Anti-Lock Brake System)	EIPB Apply and Release Test
ABS (Anti-Lock Brake System)	EIPB Maintenance Mode
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change
ABS (Anti-Lock Brake System)	ABS Service Bleed (ABS)
ABS (Anti-Lock Brake System)	ABS Service Bleed (ABS/ESP)
ABS (Anti-Lock Brake System)	Configure the lateral acceleration sensor
ABS (Anti-Lock Brake System)	Configure the longitudinal acceleration sensor
ABS (Anti-Lock Brake System)	Configure the pressure sensor
ABS (Anti-Lock Brake System)	Module initialization
ABS (Anti-Lock Brake System)	Bleed-Brake Calliper
ABS (Anti-Lock Brake System)	Bleed-Drum Brake-Wheel Cylinder
ABS (Anti-Lock Brake System)	Bleed-Brake Hose
ABS (Anti-Lock Brake System)	Bleed-Brake Tubes
ABS (Anti-Lock Brake System)	Bleed-Brake Master Cylinder
ABS (Anti-Lock Brake System)	Bleed-ABS module
ABS (Anti-Lock Brake System)	Bleed-Brake Fluid Change
ABS (Anti-Lock Brake System)	ABS Service Bleed
ABS/TCS (Anti-Lock Brake/Traction Control Module)	ON-Demand Self test
ABS/TCS (Anti-Lock Brake/Traction Control Module)	ABS Service Bleed
ACM (Audio Control Module)	Key On Engine Off Self Test
ACM (Audio Control Module)	ON-Demand Self test
AHCM (Auxiliary Heater Control Module)	Prime the Fuel System
AHCM (Auxiliary Heater Control Module)	Key On Engine Off Self Test
APIM (Accessory Protocol Interface Module)	Key On Engine Off Self Test
APIM (Accessory Protocol Interface Module)	Key On Engine Off Self Test
APIM (Accessory Protocol Interface Module)	Rear Tones Test
APIM (Accessory Protocol Interface Module)	Tones Test
BCM (Body Control Module)	Key On Engine Off Self Test
BCM (Body Control Module)	Battery Monitoring System Reset
BCM (Body Control Module)	Wiper Motor Module Calibration
BCM (Body Control Module)	TPMS Sensor Training Mode
BCM (Body Control Module)	Key On Engine Off Self Test
BCM (Body Control Module)	Battery Monitoring System Reset
BCM (Body Control Module)	CEI Lock Configuration
BCM (Body Control Module)	BCM Crash Status Reset
BCM (Body Control Module)	Key On Engine Off Self Test
BCM (Body Control Module)	BCM Crash Status Reset
BCM (Body Control Module)	Key On Engine Off Self Test
BCM (Body Control Module)	Battery Monitoring System Reset
BCM (Body Control Module)	LIN New Module Initialization
BCM (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	WMM Calibration
BCMii (Body Control Module)	RVC Configuration
BCMii (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	Wiper Motor Module Calibration
BCMii (Body Control Module)	Battery Monitoring System Reset
BCMii (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	Battery Monitoring System Reset
BCMii (Body Control Module)	Key On Engine Off Self Test
BCMii (Body Control Module)	CEI Lock Configuration
BCMii (Body Control Module)	Battery Monitoring System Reset
BCMii (Body Control Module)	LIN New Module Initialization
C-CM (Cruise Control Module)	Key On Engine Off Self Test
CCMii (Cruise Control Module)	Key On Engine Off Self Test
CSM (Central Security Module)	ON-Demand Self test
D_DCU (Driver Door Control Unit)	Module Reset

●フォードヨーロッパ 作業サポート (Ver. 2023.10)

システム名	項目名
D_DCU (Driver Door Control Unit)	Module Reset
D_DCU (Driver Door Control Unit)	Module installation
DACM-C (Digital Audio Control Module C)	Key On Engine Off Self Test
DDM (Driver's Door Module)	Key On Engine Off Self Test
DDM (Driver's Door Module)	Driver Window Motor Test
DDM (Driver's Door Module)	Module Reset
DDM (Driver's Door Module)	Module installation
DSP (Digital Signal Processing Module)	Key On Engine Off Self Test
EATC (Electronic Automatic Temperature Control)	Key On Engine Off Self Test
FACM (Fuel Additive Control Module)	New FACM (Fuel Additive Control Module)
FACM (Fuel Additive Control Module)	Refill the FAT (Fuel Additive Tank)
FCDIM (Front Control/Display Interface Module)	Key On Engine Off Self Test
FDSM (Front Distance Sensing Module)	Key On Engine Off Self Test
FFH (Fuel Fired Coolant Heating Module)	Key On Engine Off Self Test
GDM (Generic Display Module)	Key On Engine Off Self Test
GEM (Generic Electronic Module)	Module Reset
GEM (Generic Electronic Module)	Module installation
GEM (Generic Electronic Module)	Module Reset
GEM (Generic Electronic Module)	Factory Keyless Entry Code
GEM (Generic Electronic Module)	Remote Keyless Entry
GEM (Generic Electronic Module)	Remote Keyless Entry
GFM (Generic Function Module)	Key On Engine Off Self Test
GPSM (Global Positioning System Module)	Key On Engine Off Self Test
HCM (Headlamp Control Module)	Key On Engine Off Self Test
HCM (Headlamp Control Module)	Headlamp Alignment
HEC (Hybrid Electrical Cluster)	ON-Demand Self test
HVAC (Heating Ventilation Air Conditioning)	Key On Engine Off Self Test
IAB (Integrated Air Bag Module)	ON-Demand Self test
IC (Instrument Cluster)	Key On Engine Off Self Test
IPC (Instrument Panel Control Module)	Key On Engine Off Self Test
IPM-A (Image Processing Module A)	Key On Engine Off Self Test
IPM-B (Image Processing Module B)	Key On Engine Off Self Test
NAV (Navigation System)	Key On Engine Off Self Test
OCSM (Occupant Classification System Module)	Key On Engine Off Self Test
OCSM (Occupant Classification System Module)	Passenger System Reset/OCS Reset
PAM (Parking Aid Module)	Key On Engine Off Self Test
PATS (Passive Anti Theft System)-BETA	Ignition key erase
PATS (Passive Anti Theft System)-BETA	Ignition key programming
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Stop-Start Activation
PCM (PowerTrain Control Module)	Camshaft Position Reference Adaption Learn
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Fuel Injector Correction Factors
PCM (PowerTrain Control Module)	DPF Static Regeneration
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset The Exhaust Gas Recirculation Valve Learned Values
PCM (PowerTrain Control Module)	Reset The Diesel Particulate Filter Learned Values
PCM (PowerTrain Control Module)	Reset The Diesel Particulate Filter Differential Pressure Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Air Conditioning Compressor Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Temperature Value
PCM (PowerTrain Control Module)	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Fuel Injection Pump Learned Values
PCM (PowerTrain Control Module)	Reset the Turbocharger Learned Values
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Stop-Start Activation
PCM (PowerTrain Control Module)	Camshaft Position Reference Adaption Learn
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Injector Correction Factors
PCM (PowerTrain Control Module)	Reset the EGR Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset Change Air Cooler Bypass Valve Position Offs et
PCM (PowerTrain Control Module)	Reset the Cooling FAN Motor Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Learned Values

●フォードヨーロッパ 作業サポート (Ver 2023.10)

システム名	項目名
PCM (PowerTrain Control Module)	Diesel Particulate Filter Static Regeneration
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Fuel injector correction factors
PCM (PowerTrain Control Module)	DPF Static Regeneration
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Recirculation Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Learned Values
PCM (PowerTrain Control Module)	Reset the water in fuel warning indicator
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Temperature Value
PCM (PowerTrain Control Module)	Reset the Mass Air Flow Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Fuel Injector Learned Values
PCM (PowerTrain Control Module)	Reset the Turbocharger Learned Values
PCM (PowerTrain Control Module)	Stop-Start Activation
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Fuel Injector Correction Factors
PCM (PowerTrain Control Module)	DPF Static Regeneration
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Recirculation Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Learned Values
PCM (PowerTrain Control Module)	Reset the DPF Differential Pressure Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Water in Fuel Warning Indicator
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Temperature Value
PCM (PowerTrain Control Module)	Reset the High Pressure Fuel System Learned Values
PCM (PowerTrain Control Module)	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Mass Air Flow Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Turbocharger Variable Vane Position Sensor Learned Values
PCM (PowerTrain Control Module)	Power balance
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Misfire Monitor Neutral Profile Correction
PCM (PowerTrain Control Module)	Relearn Vehicle Data
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Clear Transmission Adaptive Tables
PCM (PowerTrain Control Module)	Stop Use of Transmission Adaptive
PCM (PowerTrain Control Module)	Halt Transmission Adaptive Learning
PCM (PowerTrain Control Module)	Resume Transmission Adaptive Learning
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Stop-Start Activation
PCM (PowerTrain Control Module)	Camshaft Position Reference Adaption Learn
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Relearn Vehicle Data
PCM (PowerTrain Control Module)	Misfire Monitor Neutral Profile Correction
PCM (PowerTrain Control Module)	Clear Transmission Adaptive Tables
PCM (PowerTrain Control Module)	Stop Use of Transmission Adaptive
PCM (PowerTrain Control Module)	Halt Transmission Adaptive Learning
PCM (PowerTrain Control Module)	Resume Transmission Adaptive Learning
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Fuel Injector Correction Factors
PCM (PowerTrain Control Module)	DPF Static Regeneration
PCM (PowerTrain Control Module)	Reset the Oil Change Indicator
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Recirculation Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Air Conditioning Compressor Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Temperature Value
PCM (PowerTrain Control Module)	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Fuel Injection Pump Learned Values
PCM (PowerTrain Control Module)	Reset the Turbocharger Learned Values
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Fuel Injector Correction Factors
PCM (PowerTrain Control Module)	DPF Static Regeneration
PCM (PowerTrain Control Module)	Reset the Oil Change Indicator
PCM (PowerTrain Control Module)	Reset the Intake Air Throttle Valve Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Recirculation Valve Learned Values

●フォードヨーロッパ 作業サポート (Ver. 2023.10)

システム名	項目名
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Learned Values
PCM (PowerTrain Control Module)	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Air Conditioning Compressor Learned Values
PCM (PowerTrain Control Module)	Reset the Exhaust Gas Temperature Value
PCM (PowerTrain Control Module)	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
PCM (PowerTrain Control Module)	Reset the Fuel Injection Pump Learned Values
PCM (PowerTrain Control Module)	Reset the Turbocharger Learned Values
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Reset the Powertrain Control Module Learned Values
PCM (PowerTrain Control Module)	Power balance
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Power balance
PCM (PowerTrain Control Module)	Key On Engine Off Self Test
PCM (PowerTrain Control Module)	Key On Engine Run Self Test
PCM (PowerTrain Control Module)	Reset KAM
PCM (PowerTrain Control Module)	Relearn Vehicle Data
PCM (PowerTrain Control Module)	Misfire Monitor Neutral Profile Correction
PDM (Passenger's Door Module)	Key On Engine Off Self Test
PDM (Passenger's Door Module)	Passenger Window Motor Test
PDM (Passenger's Door Module)	Power Window Initialization Passenger Side
PDM (Passenger's Door Module)	Module installation
PDM (Passenger's Door Module)	Module Reset
PDM (Passenger's Door Module)	Passenger Window Motor Test
PDM (Passenger's Door Module)	Module Reset
PSCM (Power Steering Control Module)	Key On Engine Off Self Test
PSCM (Power Steering Control Module)	Calibrate Steering Angle Sensor (EPS)
PSCM (Power Steering Control Module)	Pull Drift Compensation
PSCM (Power Steering Control Module)	Key On Engine Off Self Test
PSCM (Power Steering Control Module)	Pull Drift Compensation Reset
PSCM (Power Steering Control Module)	Steering Ahead Adaption Angle
PSCM (Power Steering Control Module)	Pull Drift Compensation Enable/Disable
PSCM (Power Steering Control Module)	Key On Engine Off Self Test
PSCM (Power Steering Control Module)	PDC Reset
PSCM (Power Steering Control Module)	Steering Wheel Position Calibration
PSCM (Power Steering Control Module)	Calibration steering angle sensor
PSCM (Power Steering Control Module)	Pull Drift Compensation
PSCM (Power Steering Control Module)	Key On Engine Off Self Test
PSCM (Power Steering Control Module)	Steering Wheel Position Calibration
PSCM (Power Steering Control Module)	Pull Drift Compensation
RCM (Restraint Control Module)	Key On Engine Off Self Test
RCM (Restraint Control Module)	RCM Module Installation
RCM (Restraint Control Module)	Parameter Reset Clear Crash Data Memory
RCM (Restraint Control Module)	Parameter Reset/Configuration Emergency Assist Activation
RCM (Restraint Control Module)	Key On Engine Off Self Test
RCM (Restraint Control Module)	ON-Demand Self test
RCM (Restraint Control Module)	Key On Engine Off Self Test
RCM (Restraint Control Module)	RCM Module Installation
RCM (Restraint Control Module)	RCM Module Installation
RCM (Restraint Control Module)	RCM Module Installation
RCM (Restraint Control Module)	Beltminder Enable/Disable
RCM (Restraint Control Module)	RCM Parameter reset / configuration
RCM (Restraint Control Module)	Parameter Reset Clear Crash Data Memory
RCM (Restraint Control Module)	Parameter Reset/Configuration Emergency Assist Activation
RCM (Restraint Control Module)	Key On Engine Off Self Test
RCM (Restraint Control Module)	Parameter Reset Clear Crash Data Memory
RFA (Remote Function Actuator)	Key On Engine Off Self Test
RGTM (Rear Gate/Trunk Module)	Clear Self learning Data
RKE (Remote Keyless Entry)	Key On Engine Off Self Test
SASM (Steering Angle Sensor Module)	Key On Engine Off Self Test
SCCM (Steering Column Control Module)	Key On Engine Off Self Test
SOBDM (Secondary OBD Control Module A)	Key On Engine Off Self Test
SOBDM-C (Secondary OBD Control Module C)	Key On Engine Off Self Test
SOD-L (Side Obstacle Detection Control Module Left)	Key On Engine Off Self Test
SOD-R (Side Obstacle Detection Control Module Right)	Key On Engine Off Self Test
SRM (Speech Recognition Module)	Key On Engine Off Self Test
TCM (Transmission Control Module)	Key On Engine Off Self Test
TCM (Transmission Control Module)	Key On Engine Run Self Test
TCM (Transmission Control Module)	TR Sensor Learning
TCM (Transmission Control Module)	Shift Drum Learning
TCM (Transmission Control Module)	Clutch Learning
TCM (Transmission Control Module)	Shift fork system learn (PowerShift Type)
TCM (Transmission Control Module)	Clutch System Learn (PowerShift Type)
TCM (Transmission Control Module)	TR Sensor Learning

●フォードヨーロッパ 作業サポート (Ver. 2023.10)

システム名	項目名
TCM (Transmission Control Module)	Shift Drum Learning
TCM (Transmission Control Module)	Clutch Learning
TCM (Transmission Control Module)	Key On Engine Off Self Test
TCM (Transmission Control Module)	Key On Engine Run Self Test
TCM (Transmission Control Module)	Key On Engine Off Self Test
TCU (Telematic Control Unit Module)	Key On Engine Off Self Test
TRM (Trailer Module)	Key On Engine Off Self Test