

●ヒョンデ 作業サポート (Ver. 2023.10)

システム名	項目名
4WD (4WD Control)	Clutch Learning Read
4WD (4WD Control)	Clutch Learning Write
4WD (4WD Control)	Adaptive Value BackUp and Input (ECU replacement)
4WD (4WD Control)	Adaptive Value BackUp and Input (ECU and Transfer Assy replacement)
4WD (4WD Control)	Air Bleeding Mode
4WD (4WD Control)	Clutch Learning Reset
4WD (4WD Control)	Clutch Learning Read
4WD (4WD Control)	Clutch Learning Write
4WD (4WD Control)	Initialize 4WD ECU
4WD (4WD Control)	T/C Clutch Calibration
4WD (4WD Control)	Power Down Calibration
4WD (4WD Control)	HW Characteristics
4WD (4WD Control)	Torque Coupling
4WD (4WD Control)	4WD Lamp
4WD (4WD Control)	Oil Data Initialization
4WD (4WD Control)	AWD Mode Selection
4WD (4WD Control)	HCU Air Bleeding Mode
4WD (4WD Control)	Variant coding
4WD (4WD Control)	Initialize 4WD ECU
AAF-R (Active Air Flap-Right)	HCU Air Bleeding Mode
ABS (Anti-Lock Brake)	Auto Detected Configuration Reset (ESC Only)
ABS (Anti-Lock Brake)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABS (Anti-Lock Brake)	Solenoid Valve Test - FL Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - FR Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - RL Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - RR Solenoid Valve
ABS (Anti-Lock Brake)	HCU Air Bleeding Mode
ABS (Anti-Lock Brake)	Steering Angle Sensor (SAS) Calibration
ABS (Anti-Lock Brake)	ESC Variant Coding
ABS (Anti-Lock Brake)	Brake Pad Change Mode
ABS (Anti-Lock Brake)	Assembly Check (ECU replacement)
ABS (Anti-Lock Brake)	Auto Variant Coding
ABS (Anti-Lock Brake)	Variant Coding (BackUp and Input)
ABS (Anti-Lock Brake)	Wheel Rear Right
ABS (Anti-Lock Brake)	Wheel Rear Left
ABS (Anti-Lock Brake)	Wheel Front Right
ABS (Anti-Lock Brake)	Wheel Front Left
ABS (Anti-Lock Brake)	HCU Air Bleeding Mode
ABSESC (ABS/ESC)	Auto Detected Configuration Reset (ESC Only)
ABSESC (ABS/ESC)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSESC (ABS/ESC)	Steering Angle Sensor (SAS) Calibration
ABSESC (ABS/ESC)	Variant Coding
ABSESC (ABS/ESC)	Variant Coding (BackUp and Input)
ABSESC (ABS/ESC)	ESC Variant Coding
ABSESC (ABS/ESC)	Deactivate factory mode
ABSESC (ABS/ESC)	Assembly Check (ECU replacement)
ABSESC (ABS/ESC)	Change Mode of DIH and MoD actuator
ABSESC (ABS/ESC)	Brake Pad Change Mode
ABSESC (ABS/ESC)	Solenoid Valve Test - FL Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - FR Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - RL Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - RR Solenoid Valve
ABSESC (ABS/ESC)	Pressure Sensor Calibration
ABSESC (ABS/ESC)	Pedal Travel Sensor (PTS) Calibration
ABSESC (ABS/ESC)	Forced circulation mode
ABSESC (ABS/ESC)	High Pressure Release Mode
ABSESC (ABS/ESC)	Fluid Circulation Mode
ABSESC (ABS/ESC)	EPB Apply/Release Function
ABSESC (ABS/ESC)	HCU Air Bleeding Mode
ABSESC (ABS/ESC)	Auto Detected Configuration Reset (ESC Only)
ABSESC (ABS/ESC)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSESC (ABS/ESC)	Steering Angle Sensor (SAS) Calibration
ABSESC (ABS/ESC)	ESC Variant Coding
ABSESC (ABS/ESC)	Variant Coding (BackUp and Input)
ABSESC (ABS/ESC)	Pressure Sensor Calibration
ABSESC (ABS/ESC)	EPB Apply/Release Function
ABSESC (ABS/ESC)	Pedal Travel Sensor (PTS) Calibration
ABSESC (ABS/ESC)	Brake Pad Change Mode
ABSESC (ABS/ESC)	HCU Air Bleeding Mode
ABSVDC (Brake)	Air Bleeding Mode
ABSVDC (Brake)	Assembly Check (ECU replacement)
ABSVDC (Brake)	Auto Detected Configuration Reset (ESC Only)
ABSVDC (Brake)	Calibration of AX Sensor - Only ESC
ABSVDC (Brake)	Change Mode of DIH and MoD actuator
ABSVDC (Brake)	Deactivate factory mode
ABSVDC (Brake)	EPB Variant Coding
ABSVDC (Brake)	Forced circulation mode
ABSVDC (Brake)	HAC/BLA/G Sensor Calibration
ABSVDC (Brake)	HCU Air Bleeding Mode

●ヒョンデ 作業サポート (Ver. 2023.10)

システム名	項目名
ABSVDC (Brake)	Hill start Assist Control Setting
ABSVDC (Brake)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSVDC (Brake)	Optional Variant coding (AT)
ABSVDC (Brake)	Optional Variant coding (MT)
ABSVDC (Brake)	Optional Variant coding+AEBS (AT)
ABSVDC (Brake)	Optional Variant coding+AEBS (MT)
ABSVDC (Brake)	Pedal Travel Sensor (PTS) Calibration
ABSVDC (Brake)	Pressure Sensor Calibration
ABSVDC (Brake)	Repair Bleeding
ABSVDC (Brake)	Solenoid Valve Test - FL Solenoid Valve
ABSVDC (Brake)	Solenoid Valve Test - FR Solenoid Valve
ABSVDC (Brake)	Solenoid Valve Test - RL Solenoid Valve
ABSVDC (Brake)	Solenoid Valve Test - RR Solenoid Valve
ABSVDC (Brake)	Steering Angle Sensor (SAS) Calibration
ABSVDC (Brake)	Variant Coding
ABSVDC (Brake)	Variant Coding (BackUp and Input)
ADAS_DRV (ADAS Driving ECU)	AVM Calibration
ADAS_PRK (Advanced Driver Assistance System_Parking)	AVM Tolerance compensation Auto
ADAS_PRK (Advanced Driver Assistance System_Parking)	MCS Calibration
ADAS_PRK (Advanced Driver Assistance System_Parking)	MCS Calibration
ADAS_PRK (Advanced Driver Assistance System_Parking)	MCS Tolerance Compensatio - Auto
ADAS_PRK (Advanced Driver Assistance System_Parking)	Variant Coding
AEB (Autonomous Emergency Braking System)	AEB Variant Coding
AEB (Autonomous Emergency Braking System)	Parameter Setting
AEB (Autonomous Emergency Braking System)	Radar Sensor Calibration
AFCU-RR (Auto Flush-Handle Control Unit-RR)	Parameter Download
AFCU-RR (Auto Flush-Handle Control Unit-RR)	Calibration
AFLS (Adaptive Front Lighting System)	AFLS AMING MODE
AFLS (Adaptive Front Lighting System)	BCW (BSD) Radar Calibration
AFLS (Adaptive Front Lighting System)	Calibration
AFLS (Adaptive Front Lighting System)	Parameter Download
AFLS (Adaptive Front Lighting System)	Parameter Download-Air Suspension
AFLS (Adaptive Front Lighting System)	Parameter Download-Delivery
AGCS (Active Geometry Control Suspension)	Pressure Sensor Calibration
AGCS (Active Geometry Control Suspension)	Pedal Travel Sensor (PTS) Calibration
AHB (Active Hydraulic Booster)	AHB Variant Coding
AHB (Active Hydraulic Booster)	Pedal Travel Sensor (PTS) Calibration
AHB (Active Hydraulic Booster)	Pressure Sensor Calibration
AHLS (Auto Headlamp Leveling System)	Headlamp Leveling
AHLS (Auto Headlamp Leveling System)	Level Initialization
AHLS (Auto Headlamp Leveling System)	Parameter Setting and Zero position Initial
AHLS (Auto Headlamp Leveling System)	Senser Initialization
AHLS (Auto Headlamp Leveling System)	System Initialization
AHS (Active Hood System)	Crash Data (Fire History)
AHS (Active Hood System)	Crash Data (Not-Fire History)
AHS (Active Hood System)	Crash Data (Fire History)
AIRBAG	ACU Variant Coding
AIRBAG	Driver Side Crash Information
AIRBAG	Front Crash Information
AIRBAG	Non SAB/Rear/Static Rollover Crash Information
AIRBAG	PAB realtime information
AIRBAG	Pass. Airbag Realtime Info.
AIRBAG	Passenger Side Crash Information
AIRBAG	Rollover Crash Information
AIRBAG	Side Drive Crash Information
AIRBAG	Side Passenger Crash Onformation
AMP (Amplifier)	AMP Operation Test
AMT (Automated Manual Transmission)	AMT Learning Function
AMT (Automated Manual Transmission)	AMT Clutch Actuator Abrasion Compensating Actuation
APSM (Assist Power Seat Module)	Seat Limit Position Setting
APSS (Assist Power Seat Switch)	Seat Limit Position Setting
APSU (Assist Power Seat Unit)	Seat Limit Position Setting
ARS (Rear Armrest Switch)	Seat Limit Position Setting
AT (Automatic Transaxle)	Checking the wear amount of clutch
AT (Automatic Transaxle)	Clutch compensation value setting
AT (Automatic Transaxle)	CVT Learning - Shift Lever CTRL
AT (Automatic Transaxle)	DCT Learning Function
AT (Automatic Transaxle)	Oil-pressure Characteristics BackUp Input (TCU replacement)
AT (Automatic Transaxle)	Oil-pressure Characteristics Input (Solenoid Valve Replacement)
AT (Automatic Transaxle)	Oil-pressure Characteristics Input (A/T Replacement)
AT (Automatic Transaxle)	Resetting Auto Trans Adaptive Values
AT (Automatic Transaxle)	Resetting Auto Trans Adaptive Values
AT (Double Clutch Transmission)	Air bleeding
AT (Double Clutch Transmission)	Air bleeding diagnosis
AT (Double Clutch Transmission)	Forced HF EOP driving
AT (Double Clutch Transmission)	Line pressure removal mode
AT (Double Clutch Transmission)	Line pressure removal mode off
AT (Double Clutch Transmission)	Oil-pressure Characteristics BackUp Input (TCU replacement) "
AT (Double Clutch Transmission)	Oil-pressure Characteristics Input (Solenoid Valve Replacement) "

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
AT (Double Clutch Transmission)	Oil-pressure Characteristics Input (A/T Replacement)
AT (Double Clutch Transmission)	Resetting Auto Trans Adaptive Values
AT (Double Clutch Transmission)	Transmission initialization (For replacing the transmission)*
AT (Double Clutch Transmission)	Transmission learning
AVM (Around View Monitor System)	AVM Calibration
AVM (Around View Monitor System)	AVM Tolerance compensation - Auto
AVN (Audio Video Navigation)	AVN/Audio Diagnostic Mode
AVN (Audio Video Navigation)	Read the information of AVN
AVN (Audio Video Navigation)	Ring Break
AVN (Audio Video Navigation)	SVM Calibration
AVN (Audio Video Navigation)	SVM Self-calibration mode
AVN (Audio Video Navigation)	SVM Tolerance compensation - Auto
AVN (Audio Video Navigation)	Variant Coding
BCM (Body Control Module)	2-Turn Unlock
BCM (Body Control Module)	ARM/DISARM by Mechanical Key
BCM (Body Control Module)	Auto Door Lock (Option)
BCM (Body Control Module)	Auto Door Unlock (Option)
BCM (Body Control Module)	Auto Light
BCM (Body Control Module)	Auto Light Control
BCM (Body Control Module)	Buglar Alarm
BCM (Body Control Module)	Day Time Running Light
BCM (Body Control Module)	Direction_Brake Lamp
BCM (Body Control Module)	Etc
BCM (Body Control Module)	Headlamp Escort Control
BCM (Body Control Module)	Horn Answer Back (Option)
BCM (Body Control Module)	Key Reminder for TAXI
BCM (Body Control Module)	Lamps
BCM (Body Control Module)	Option Division
BCM (Body Control Module)	Power Resource
BCM (Body Control Module)	Power Window
BCM (Body Control Module)	Transmitter
BCM (Body Control Module)	Wiper
BCW (Blind-Spot Collision Warning)	BCW (BSD) variant coding
BCW (Blind-Spot Collision Warning)	BCW (BSD) Radar Calibration
BCW (Blind-Spot Collision Warning)	BCW (BSD) Radar Calibration
BCW (Blind-Spot Collision Warning)	BCW (BSD) Radar Calibration
BMS (Battery Management System)	12V Battery SOC Correction Function
BMS (Battery Management System)	Battery Inspection
BMS (Battery Management System)	ECU Initialization
BMS (Battery Management System)	Inspection of 12V Battery Status
BMS (Battery Management System)	Isolation Breakdown Detection Function
BMS (Battery Management System)	SOC Calibration
BMS (Battery Management System)	SOH Reset
BMS (EV Battery System)	SOH Reset
BMS (EV Battery System)	SOC Calibration
BMS (EV Battery System)	Isolation Breakdown Detection Function
BMS (EV Battery System)	12V Battery SOC Correction Function
BMS (EV Battery System)	Isolation Breakdown Detection Function
BMS (EV Battery System)	12V Battery SOC Correction Function
BMS (EV Battery System)	Isolation Breakdown Detection Function
BMS (EV Battery System)	SOC Calibration
BSD (Blind Spot Detection)	BCW (BSD) Radar Calibration
BSD (Blind Spot Detection)	BCW Variant Coding
BSD-L (Blind Spot Detection-Left)	BCW (BSD) Radar Calibration
BSD-L (Blind Spot Detection-Left)	BCW Variant Coding
BSD-R (Blind Spot Detection-Right)	BCW (BSD) Radar Calibration
BSD-R (Blind Spot Detection-Right)	BCW Variant Coding
C_RADAR (Corner Radar)	BCW (BSD) Radar Calibration
C_RADAR (Corner Radar)	Variant Coding
C_RADAR (Corner Radar)	Variant Coding (BackUp and Input)
CGW (Central Gateway)	Erase Network Configuration
CGW (Central Gateway)	EOL PAS Data
CGW (Central Gateway)	EOL Regional Code Data
CGW (Central Gateway)	Rain Sensor Data
CGW (Central Gateway)	LDWS Data
CGW (Central Gateway)	VDC Data
CGW (Central Gateway)	ISG Inhibit SW Data
CGW (Central Gateway)	Burglaram Data
CGW (Central Gateway)	RKE Key Registry Mode
CLU (Cluster Module)	CLU Variant Coding
CLU (Cluster Module)	Service Reminder Setting
CLU_VC (Cluster Variant Coding)	CLU Variant Coding
CLU_VC (Cluster Variant Coding)	Service Reminder Setting
CODE (Transmitter Code Saving)	Code Saving
CODE (Transmitter Code Saving)	Transmitter Code Saving
CODE (Transmitter Code Saving)	Register Transmitter
CVT (Continuously Variable Transmission)	Resetting Auto Trans Adaptive Values
CVT (Continuously Variable Transmission)	Oil-pressure Characteristics Input (A/T Replacement)
CVT (Continuously Variable Transmission)	Oil-pressure Characteristics BackUp Input (TCU replacement)

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
CVT (Continuously Variable Transmission)	Pressure Sensor Characteristics Input (Pressure Sensor Replacement)
DAU (Door Area Unit)	User Option
DDM (Driver Door Module)	User Option
DDM (Driver Door Module)	Initialization of rear door curtains
DIS (Multimedia)	Variant Coding
DIS (Multimedia)	Ring Break
DTGDIS (Digital Tachograph)	VIN
DTGDIS (Digital Tachograph)	W-Vehicle Characteristic Constant
DTGDIS (Digital Tachograph)	VIN Input
DTGDIS (Digital Tachograph)	Vehicle Variant
DTGDIS (Digital Tachograph)	Transport Business Registration Number
DTGDIS (Digital Tachograph)	Password
DTGDIS (Digital Tachograph)	Vehicle Driver Index
DTGDIS (Digital Tachograph)	G-Sensor Calibration
ECALL	eCall Test Number Input
ECALL	eCall Log/MSD Save and Delete
ECALL	eCall Parameter Download
ECALL	eCall System Reset
ECS (Electronic Control Suspension)	Air Pressure Check
ECS (Electronic Control Suspension)	Ambience Valve Check
ECS (Electronic Control Suspension)	Auto Detected Configuration Reset (ESC Only)
ECS (Electronic Control Suspension)	Damping Valve Check
ECS (Electronic Control Suspension)	Filling Front Left Struts
ECS (Electronic Control Suspension)	Filling Front Right Struts
ECS (Electronic Control Suspension)	Filling Rear Left Struts
ECS (Electronic Control Suspension)	Filling Rear Right Struts
ECS (Electronic Control Suspension)	Finish Service Mode
ECS (Electronic Control Suspension)	Height Level Control Select
ECS (Electronic Control Suspension)	Height Sensor Calibration (Reset)
ECS (Electronic Control Suspension)	Height Sensor Check
ECS (Electronic Control Suspension)	Reservoir and all four air spring
ECS (Electronic Control Suspension)	Venting for ALL
ECS (Electronic Control Suspension)	Venting Front Struts (FL + FR)
ECS (Electronic Control Suspension)	Venting Rear Struts (RL + RR)
ELSD (Electronic Limited Slip Differential)	Adaptive Value BackUp and Input (ECU and ELSD H/W replacement at once)
ELSD (Electronic Limited Slip Differential)	Adaptive Value BackUp and Input (ECU replacement)
ELSD (Electronic Limited Slip Differential)	Air Bleeding mode
ELSD (Electronic Limited Slip Differential)	Clutch Learning Reset
ENGINE	Air Control Valve (ACV) replacement
ENGINE	Airflow sensor replacement
ENGINE	APS module replacement
ENGINE	Auto Detected Configuration Reset
ENGINE	Converter ASSY (LNT+DPF) replacement
ENGINE	Differential Pressure Sensor replacement
ENGINE	DPF Service Generation
ENGINE	ECU replacement (DPF OPT)
ENGINE	ECU Tuning Data Confirm
ENGINE	EGR valve replacement
ENGINE	Evap. Leakage Test
ENGINE	Fuel line air removal
ENGINE	GPF Service Regeneration
ENGINE	Idle CO Adjustment
ENGINE	Idle speed comparison
ENGINE	Injection Quantity Comparison
ENGINE	Injector Specific Data
ENGINE	Integrated Thermal Module Coolant Filling Mode
ENGINE	ISG TEST (Option)
ENGINE	Lambda Sensor (LSU) Cleaning
ENGINE	Lambda sensor replacement
ENGINE	Learning after replacing the turbocharger actuator - With Stopper
ENGINE	PCM Lock (MEC) Setting
ENGINE	Rail pressure sensor replacement
ENGINE	Read VIN
ENGINE	Resetting Adaptive Values
ENGINE	Swirl Control Valve replacement
ENGINE	Write VIN
ENGINE (EMS ECU)	Resetting Adaptive Values
ENGINE (EMS ECU)	Read VIN
ENGINE (EMS ECU)	Write VIN
ENGINE (EMS ECU)	ISG TEST (Option)
ENGINE (EMS ECU)	Auto Detected Configuration Reset

●ヒョンデ 作業サポート (Ver. 2023.10)

システム名	項目名
ENGINE (EMS ECU)	PCM Lock (MEC) Setting
Engine (EMS)	Resetting Adaptive Values
Engine (EMS)	Auto Detected Configuration Reset
Engine (EMS)	Read VIN
Engine (EMS)	Write VIN
Engine (EMS)	ISG TEST (Option)
Engine (EMS:Older)	Resetting Adaptive Values
Engine (EMS:Older)	Auto Detected Configuration Reset
Engine (Integrated)	Resetting Adaptive Values
Engine (Integrated)	Auto Detected Configuration Reset
EPB (Electric Parking Brake)	Brake Pad Change Mode
EPB (Electric Parking Brake)	EPB Variant Coding
EPB (Electric Parking Brake)	G-Sensor Calibration
EPB (Electric Parking Brake)	Assembly Check (ECU replacement)
EPS (Electronic Power Steering)	EPS Type Recognition
EPS (Electronic Power Steering)	Steering Angle Sensor (SAS) Calibration
EPS (Motor Driven Power Steering)	EPS Type Recognition
EPS (Motor Driven Power Steering)	Steering Angle Sensor (SAS) Calibration
EPS (Motor Driven Power Steering)	Part replacement (Power steering motor)
EPS (Motor Driven Power Steering)	Part exchange (Power steering ECU)
EPS (Motor Driven Power Steering)	Set the steering wheel torque to zero
EPS (Motor Driven Power Steering)	Steering Angle Sensor Reset (Only Column/Housing Assy Replacement)
EPS (Power Steering)	EPS Type Recognition
EPS (Power Steering)	Steering Angle Sensor (SAS) Calibration
EPS (Power Steering)	Part replacement (Power steering motor)
EPS (Power Steering)	Part exchange (Power steering ECU)
EPS (Power Steering)	Set the steering wheel torque to zero
EPS (Power Steering)	Steering Angle Sensor Reset (Only Column/Housing Assy Replacement)
EPS (Power Steering)	HCU Air Bleeding Mode
EPS (Power Steering)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ESC (Electronic Stability Control)	Auto Detected Configuration Reset (ESC Only)
ESC (Electronic Stability Control)	Assembly Check (ECU replacement)
ESC (Electronic Stability Control)	Brake Pad Change Mode
ESC (Electronic Stability Control)	Deactivate factory mode
ESC (Electronic Stability Control)	ESC Variant Coding
ESC (Electronic Stability Control)	Fluid Circulation Mode
ESC (Electronic Stability Control)	HAC/BLA/G Sensor Calibration
ESC (Electronic Stability Control)	HCU Air Bleeding Mode
ESC (Electronic Stability Control)	High Pressure Release Mode
ESC (Electronic Stability Control)	Hill start Assist Control Setting
ESC (Electronic Stability Control)	Intelligent Driving Mode Integrated Control
ESC (Electronic Stability Control)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ESC (Electronic Stability Control)	Pedal Travel Sensor (PTS) Calibration
ESC (Electronic Stability Control)	Pressure Sensor Calibration
ESC (Electronic Stability Control)	Steering Angle Sensor (SAS) Calibration
ESC (Electronic Stability Control)	Solenoid Valve Test - FL Solenoid Valve
ESC (Electronic Stability Control)	Solenoid Valve Test - FR Solenoid Valve
ESC (Electronic Stability Control)	Solenoid Valve Test - RL Solenoid Valve
ESC (Electronic Stability Control)	Solenoid Valve Test - RR Solenoid Valve
ESCAHB (ESC/AHB)	HCU Air Bleeding Mode
ESCAHB (ESC/AHB)	Auto Detected Configuration Reset (ESC Only)
ESCAHB (ESC/AHB)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ESCAHB (ESC/AHB)	Pressure Sensor Calibration
ESCAHB (ESC/AHB)	Pedal Travel Sensor (PTS) Calibration
ESCAHB (ESC/AHB)	High Pressure Release Mode
ESCAHB (ESC/AHB)	Fluid Circulation Mode
ESCAHB (ESC/AHB)	Variant Coding
ESCAHB (ESC/AHB)	Variant Coding (BackUp and Input)
ESP (Electronic Stability Program)	Auto Detected Configuration Reset (ESC Only)
ESP (Electronic Stability Program)	ESC Variant Coding
ESP (Electronic Stability Program)	HCU Air Bleeding Mode
ESP (Electronic Stability Program)	Intelligent Driving Mode Integrated Control
ESP (Electronic Stability Program)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ESP (Electronic Stability Program)	Steering Angle Sensor (SAS) Calibration
ESP (Electronic Stability Program)	Variant Coding (BackUp and Input)
ESPAHB (ESP/AHB)	Auto Detected Configuration Reset (ESC Only)
ESPAHB (ESP/AHB)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ESPAHB (ESP/AHB)	Pressure Sensor Calibration
ESPAHB (ESP/AHB)	Pedal Travel Sensor (PTS) Calibration
ESPAHB (ESP/AHB)	Brake Pad Change Mode
ESPAHB (ESP/AHB)	Assembly Check (ECU replacement)

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
ESPAHB (ESP/AHB)	Variant Coding
ESU (Ethernet Switch Unit)	Variant Coding (BackUp and Input)
FCA (Forward Collision-Avoidance Assist)	Variant Coding
FCA (Forward Collision-Avoidance Assist)	Inspection/correction of the front-radar mounting angle (FCA/SCC)
FCA (Forward Collision-Avoidance Assist)	Radar Sensor Alignment (SCC/AEB)
FCU (Fuel Cell System)	Read VIN
FCU (Fuel Cell System)	Write VIN
FCU (Fuel Cell System)	Stack Coolant Pump Actuating
FCU (Fuel Cell System)	FC Run/Stop
FCU (Fuel Cell System)	Solenoid Valve Inspection for hydrogen tank
FCU (Fuel Cell System)	Offset resetting of the hydrogen pressure sensor
FCU (Fuel Cell System)	Resetting of the replacement interval for the stack coolant and the ion filter
FCU (Fuel Cell System)	Correction of the hydrogen pressure sensor
FCU (Fuel Cell System)	Stack pinhole detection function
FCU (Fuel Cell System)	Fuel Supply Valve Open Mode
FCU (Fuel Cell System)	Air Cut-Off Valve Open Mode
FPM (Finger Print Module)	IAU - IBU Status Information
FPM (Finger Print Module)	FPM Diagnostic Check
FPM (Finger Print Module)	FPM Enroll Coverage Check
FPM (Finger Print Module)	FPM-Sensor Touch Check
FPM (Finger Print Module)	Initialize the Enrolled Fingerprint
FR_CMV (Front View Camera)	SPTAC Calibration
FR_CMV (Front View Camera)	Front Camera Driving (SPC) Calibration
FR_CMV (Front View Camera)	Variant Coding
FR_CMV (Front View Camera)	SPC Calibration
FR_CMV (Multi Function Camera)	SPTAC Calibration
FR_CMV (Multi Function Camera)	Variant Coding
FR_CMV (Multi Function Camera)	Variant Coding (BackUp and Input)
FR_RADAR (Front Radar)	Radar Sensor Alignment (SCC/AEB)
FR_RADAR (Front Radar)	Variant Coding
FR_RADAR (Front Radar)	Variant Coding (BackUp and Input)
FR_RADAR (Front Radar)	Inspection_correction of the front-radar mounting angle
HCU (HEV Control System)	Engine Test On
HCU (HEV Control System)	Engine Test Off
HCU (HEV Control System)	Compression pressure test of engine cylinder
HCU (HEV Control System)	HCU Variant Coding
HCULDC (HCU/Low DC-DC Converter)	Engine Test On
HCULDC (HCU/Low DC-DC Converter)	Engine Test Off
HCULDC (HCU/Low DC-DC Converter)	Compression pressure test of engine cylinder
HCULDC (HCU/Low DC-DC Converter)	HCU Variant Coding
HCULDC (HCU/Low DC-DC Converter)	Engine Clutch Fluid Pressure Calibration
HEADUNIT (Head Unit)	Ring Break
HEADUNIT (Head Unit)	Wake up Line
HEADUNIT (Head Unit)	XdB Test
HEADUNIT (Head Unit)	ECU Serial Number
HEADUNIT (Head Unit)	All SW Version
HEADUNIT (Head Unit)	Update from CD
HEADUNIT (Head Unit)	Request if DVD slots empty
HEADUNIT (Head Unit)	Variant Coding
HMU (Hydrogen storage system Management Unit)	Enter the tank refill count
HSCU (Hydrogen Storage System)	Read The Number Of Refueling
HSCU (Hydrogen Storage System)	Write The Number Of Refueling
HSCU (Hydrogen Storage System)	Reset The Number Of Refueling
HUD (Head Up Display)	HUD Calibration
HUD (Head Up Display)	HUD Calibration - Rotation
HUD (Head Up Display)	HUD Calibration - Smile
HUD (Head Up Display)	HUD Calibration - Slope (Up/Down)
HUD (Head Up Display)	HUD Calibration - Horizontal Test
HUD (Head Up Display)	HUD Calibration - Display Vertical Position
HUD (Head Up Display)	HUD Calibration - Reset
HUD (Head Up Display)	HUD zero setting
HUD (Head Up Display)	HUD zero setting - Reset
HUD (Head Up Display)	HUD zero setting - Horizontal rotation
HUD (Head Up Display)	HUD zero setting - Upward/downward calibration
HUD (Head Up Display)	HUD zero setting - Slope (up/down) calibration
HUD (Head Up Display)	HUD zero setting - Parallel slope calibration
HUD (Head Up Display)	HUD zero setting - Vertical movement position indication
HUD (Head Up Display)	HUD zero setting - Slope (left/right) calibration
HUD (Head Up Display)	HUD zero setting - Width calibration
HUD (Head Up Display)	HUD zero setting - Height calibration
IAU (Identity Authentication Unit)	IAU Neutralization Mode

●ヒョンデ 作業サポート (Ver. 2023.10)

システム名	項目名
IAU (Identity Authentication Unit)	IBU Neutralization Mode
IAU (Identity Authentication Unit)	FPM Neutralization Mode
IAU (Identity Authentication Unit)	Status Information
IAU (Identity Authentication Unit)	IAU - IBU Learning Function
IAU (Identity Authentication Unit)	IAU - BLE Learning Function
IAU (Identity Authentication Unit)	Card Key Registry Mode Activation
IAU (Identity Authentication Unit)	IAU - FPM Learning
IBU-BCM (IBU-Body Control Module)	Variant Coding
IBU-BCM (Integrated Body Control Unit)	Variant Coding
IBU-BCM (Integrated Body Control Unit-BCM)	Variant Coding
IBU-IMMO (IBU-Immobilizer)	Password Teaching/Changing
IBU-IMMO (IBU-Immobilizer)	Neutral Mode
IBU-IMMO (IBU-Immobilizer)	Limp Home Mode
IBU-IMMO (IBU-Immobilizer)	Learnt Keys
IBU-IMMO (Integrated Body Control Unit)	Password Teaching/Changing
IBU-IMMO (Integrated Body Control Unit)	Neutral Mode
IBU-IMMO (Integrated Body Control Unit)	Limp Home Mode
IBU-IMMO (Integrated Body Control Unit)	Learnt Keys
IBU-IMMO (Integrated Body Control Unit-IMMO)	Password Teaching/Changing
IBU-IMMO (Integrated Body Control Unit-IMMO)	Neutral Mode
IBU-IMMO (Integrated Body Control Unit-IMMO)	Limp Home Mode
IBU-IMMO (Integrated Body Control Unit-IMMO)	Learnt Keys
IBU-IMMO (Integrated Body Control Unit-IMMO)	ECM Neutralization
IBU-IMMO (Integrated Body Control Unit-IMMO)	SMK Neutralization
IBU-IMMO (Integrated Body Control Unit-IMMO)	ESCL Neutralization
IBU-IMMO (Integrated Body Control Unit-IMMO)	SMK Status Information
IBU-IMMO (Integrated Body Control Unit-IMMO)	ESCL Status Information
IBU-IMMO (Integrated Body Control Unit-IMMO)	FOB KEY Status Information
IBU-IMMO (Integrated Body Control Unit-IMMO)	Smart Key Code Saving
IBU-IMMO (Integrated Body Control Unit-IMMO)	Driver Door Handle Antenna - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Passenger Door Handle Antenna - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Interior Antenna 1 - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Interior Antenna 2 - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Trunk Antenna (Sedan Only) - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Bumper/Tailgate Antenna - Check
IBU-IMMO (Integrated Body Control Unit-IMMO)	Hat Shelf Antenna - Check
IBU-SMK (IBU-Smart Key Unit)	Current FOB Key Check
IBU-SMK (IBU-Smart Key Unit)	ESCL Communication Line Check
IBU-SMK (IBU-Smart Key Unit)	ECM Neutralization
IBU-SMK (IBU-Smart Key Unit)	SMK Neutralization
IBU-SMK (IBU-Smart Key Unit)	ESCL Neutralization
IBU-SMK (IBU-Smart Key Unit)	SMK Status Information
IBU-SMK (IBU-Smart Key Unit)	ESCL Status Information
IBU-SMK (IBU-Smart Key Unit)	ESCL Open Status Check
IBU-SMK (IBU-Smart Key Unit)	FOB KEY Status Information
IBU-SMK (IBU-Smart Key Unit)	Smart Key Code Saving
IBU-SMK (IBU-Smart Key Unit)	Interior Antenna 1 - Check
IBU-SMK (IBU-Smart Key Unit)	Interior Antenna 2 - Check
IBU-SMK (IBU-Smart Key Unit)	Trunk Antenna (Sedan Only) - Check
IBU-SMK (IBU-Smart Key Unit)	Interior Antenna 3 (RV/Hatchback Only) - Check
IBU-SMK (IBU-Smart Key Unit)	Bumper/Tailgate Antenna - Check
IBU-SMK (IBU-Smart Key Unit)	Driver Door Handle Antenna - Check
IBU-SMK (IBU-Smart Key Unit)	Passenger Door Handle Antenna - Check
IBU-SMK (IBU-Smart Key Unit)	Hat Shelf Antenna - Check
IBU-SMK (Integrated Body Control Unit)	ECM Neutralization
IBU-SMK (Integrated Body Control Unit)	SMK Neutralization
IBU-SMK (Integrated Body Control Unit)	SMK Status Information
IBU-SMK (Integrated Body Control Unit)	FOB KEY Status Information
IBU-SMK (Integrated Body Control Unit)	Smart Key Code Saving
IBU-SMK (Integrated Body Control Unit)	Driver Door Handle Antenna - Check
IBU-SMK (Integrated Body Control Unit)	Passenger Door Handle Antenna - Check
IBU-SMK (Integrated Body Control Unit)	Rear Driver Door Handle Antenna
IBU-SMK (Integrated Body Control Unit)	Rear Passenger Door Handle Antenna
IBU-SMK (Integrated Body Control Unit)	Interior Antenna 1 - Check
IBU-SMK (Integrated Body Control Unit)	Interior Antenna 2 - Check
IBU-SMK (Integrated Body Control Unit)	Interior Antenna 3 (RV/Hatchback Only) - Check
IBU-SMK (Integrated Body Control Unit)	Bumper/Tailgate Antenna - Check
IBU-SMK (Integrated Body Control Unit)	Hat Shelf Antenna - Check
IBU-SMK (Integrated Body Control Unit)	Front Bumper Antenna Check
IBU-SMK (Integrated Body Control Unit-SMK)	ECM Neutralization
IBU-SMK (Integrated Body Control Unit-SMK)	SMK Neutralization
IBU-SMK (Integrated Body Control Unit-SMK)	SMK Status Information

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
IBU-SMK (Integrated Body Control Unit-SMK)	FOB KEY Status Information
IBU-SMK (Integrated Body Control Unit-SMK)	Smart Key Code Saving
IBU-SMK (Integrated Body Control Unit-SMK)	Driver Door Handle Antenna - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Passenger Door Handle Antenna - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Rear Driver Door Handle Antenna
IBU-SMK (Integrated Body Control Unit-SMK)	Rear Passenger Door Handle Antenna
IBU-SMK (Integrated Body Control Unit-SMK)	Interior Antenna 1 - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Interior Antenna 2 - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Interior Antenna 3 (RV/Hatchback Only) - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Bumper/Tailgate Antenna - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Hat Shelf Antenna - Check
IBU-SMK (Integrated Body Control Unit-SMK)	Front Bumper Antenna Check
IBU-TPMS (IBU-Tire Pressure Monitoring System)	Normal Data
IBU-TPMS (IBU-Tire Pressure Monitoring System)	Tire Events
IBU-TPMS (IBU-Tire Pressure Monitoring System)	Wheel Sensor ID Writing
IBU-TPMS (IBU-Tire Pressure Monitoring System)	Vehicle Name Writing
IBU-TPMS (IBU-Tire Pressure Monitoring System)	TPMS Reception Rate Measuring Mode
IBU-TPMS (Integrated Body Control Unit)	Normal Data
IBU-TPMS (Integrated Body Control Unit)	Tire Events
IBU-TPMS (Integrated Body Control Unit)	Wheel Sensor ID Writing
IBU-TPMS (Integrated Body Control Unit)	Vehicle Name Writing
IBU-TPMS (Integrated Body Control Unit)	TPMS Reception Rate Measuring Mode
IBU-TPMS (Integrated Body Control Unit-TPMS)	Normal Data
IBU-TPMS (Integrated Body Control Unit-TPMS)	Tire Events
IBU-TPMS (Integrated Body Control Unit-TPMS)	Wheel Sensor ID Writing
IBU-TPMS (Integrated Body Control Unit-TPMS)	Vehicle Name Writing
ICCU (Integrated Charging Control Unit)	Battery Discharge Alarm History
ICU (Integrated Central Control Unit)	Battery Discharge Alarm History
IFU (Interface Unit)	Normal Data
IFU (Interface Unit)	Immobilizer
IFU (Interface Unit)	Transmitter
IFU (Interface Unit)	ECM Neutralization
IFU (Interface Unit)	IFU Neutralization
IGPM (Integrated Gateway Power Control Module)	Erase Network Configuration
IGPM (Integrated Gateway Power Control Module)	Battery Discharge Alarm History
IGPM (Integrated Gateway Power Control Module)	Calibration
IGPM (Integrated Gateway Power Control Module)	IFS LED operation inspection
IGPM (Integrated Gateway Power Control Module)	Variant Coding
ILCU-LH (Integrated Led healamp Control Unit_LH)	Calibration
ILCU-LH (Integrated Led healamp Control Unit_LH)	IFS LED operation inspection
ILCU-LH (Integrated Led healamp Control Unit_LH)	Variant Coding
ILCU-RH (Integrated Led healamp Control Unit_RH)	Calibration
ILCU-RH (Integrated Led healamp Control Unit_RH)	Variant Coding (BackUp and Input)
ILCU-RH (Integrated Led healamp Control Unit_RH)	Variant Coding
ILCU-RH (Integrated Led healamp Control Unit_RH)	IFS LED operation inspectio
ILCU-RH (Integrated Led healamp Control Unit_RH)	Password Teaching/Changing
ILCU-RH (Integrated Led healamp Control Unit_RH)	Neutral Mode
ILCU-RH (Integrated Led healamp Control Unit_RH)	Limp Home Mode
ILCU-RH (Integrated Led healamp Control Unit_RH)	Learnt Keys
IMMO (Immobilizer)	PIN Number Check
IMMO (Immobilizer)	Password Teaching/Changing
IMMO (Immobilizer)	Neutral Mode
IMMO (Immobilizer)	Limp Home Mode
IMMO (Immobilizer)	Smatra neutral mode
IMMO (Immobilizer)	Learnt Keys
IMT (Intelligent Manual Transmission)	IMT Filling check
IMT (Intelligent Manual Transmission)	IMT Learning value erasure
IPM (Instrument Panel Module)	Option Division
IPM (Instrument Panel Module)	Power Resource
IPM (Instrument Panel Module)	Lamps
IPM (Instrument Panel Module)	Buglar Alarm
IPM (Instrument Panel Module)	Etc
IPM (Instrument Panel Module)	Smart Key Status
IPM (Instrument Panel Module)	Auto Light
IPM (Instrument Panel Module)	Transmitter
IPM (Instrument Panel Module)	Serial Communication Line Check - ESCL Communication Line Check
LAN	ETACS
LAN	In Panel ECU
LAN	Driver Door Module
LAN	Passenger Door Module
LDWS (Lane Departure Warning System)	LDWS Reference Point Calibration

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
LDWS (Lane Departure Warning System)	LDWS Variant Coding
LDWS (Lane Departure Warning System)	LDWS Region Code
LDWS (Lane Departure Warning System)	LKAS/LDWS Variant Coding
LDWS (Lane Departure Warning System)	SPTAC Calibration
LDWS (Lane Departure Warning System)	SPC Calibration
LDWS (Lane Departure Warning System)	LDWS Region Code
LDWS (Lane Departure Warning System)	LKAS/LDWS Variant Coding
LDWS (Lane Departure Warning System)	SPTAC Calibration
LDWS (Lane Departure Warning System)	SPC Calibration
LDWS (Lane Departure Warning System)	Vehicle Model Type
LDWS (Lane Departure Warning System)	Horizontal Center Position
LDWS (Lane Departure Warning System)	Vertical Center Position
LDWS (Lane Departure Warning System)	Warning Start Velocity
LDWS (Lane Departure Warning System)	Delay Velocity for Entering Low Speed Range
LDWS (Lane Departure Warning System)	LDWS Warning Duration
LDWS (Lane Departure Warning System)	Warning Threshold Right Step
LDWS (Lane Departure Warning System)	Warning Threshold Left Step
LDWS (Lane Departure Warning System)	Delay Time to Decide Haptic Warning With White Lane
LDWS (Lane Departure Warning System)	Delay Time for Warning Turn Off
LDWS (Lane Departure Warning System)	Status of Calibration Procedure Execution
LDWS (Lane Departure Warning System)	Status of Inline Test Mode Result
LDWS (Lane Departure Warning System)	Status of Local Setting
LDWS (Lane Departure Warning System)	Status of Handle Side Setting
LDWS (Lane Departure Warning System)	LDWS RP Calibration
LKA (Lane Keeping Assist)	SPTAC Calibration
LKA (Lane Keeping Assist)	Variant Coding
LKAS (Lane Keeping Assist System)	LKAS/LDWS Variant Coding
LKAS (Lane Keeping Assist System)	SPTAC Calibration
LKAS (Lane Keeping Assist System)	SPC Calibration
MCA (Modular Clutch Actuator)	Engine Clutch Learning (when exchanging a part in addition to the engine clutch set)
MCA (Modular Clutch Actuator)	"Engine Clutch Learning (when exchanging the engine clutch set)"
MCS (Multi-View Camera System)	AVM Tolerance compensation - Auto
MCS (Multi-View Camera System)	AVM Calibration
MCU (EV Motor Control System)	Initialization of Automatic Resolver Offset Calibration
MCU (EV Motor Control System)	Electric Water Pump Control
MCU (EV Motor Control System)	EPCU (MCU) self-diagnosis function
MCU (HEV Motor Control System)	Motor/HSG Resolver Calibration
MCU (HEV Motor Control System)	Electric Water Pump Control
MCU (HEV Motor Control System)	Initialization of Automatic Resolver Offset Calibration
MCU (HEV Motor Control System)	HPCU (MCU/GCU) self-diagnosis function
MCU (Motor Control System)	Electric Water Pump Control
MCU (Motor Control System)	Initialization of Automatic Resolver Offset Calibration
MCU (Motor Control System)	EPCU (MCU) self-diagnosis function
MCU (Motor Control System)	HPCU (MCU/GCU) self-diagnosis function
MCU (Motor Control System)	HPCU (MCU, GCU) Diagnosis Parameter Initialization
MCU (PHEV Motor Control System)	Motor/HSG Resolver Calibration
MCU (PHEV Motor Control System)	Electric Water Pump Control
MCU (PHEV Motor Control System)	HPCU (MCU/GCU) self-diagnosis function
MCU (PHEV Motor Control System)	HPCU (MCU, GCU) Diagnosis Parameter Initialization
MCU_F (Motor Control Unit-Front)	Electric Water Pump Control
MCU_F (Motor Control Unit-Front)	Initialization of Automatic Resolver Offset Calibration
MCU_F (Motor Control Unit-Front)	EPCU (MCU) self-diagnosis function
MCU_R (Motor Control Unit-Rear)	Electric Water Pump Control
MCU_R (Motor Control Unit-Rear)	Initialization of Automatic Resolver Offset Calibration
MCU_R (Motor Control Unit-Rear)	EPCU (MCU) self-diagnosis function
MFC (Multi Function Camera)	SPTAC Calibration
MFC (Multi Function Camera)	Variant Coding
MFC (Multi Function Camera)	Vehicle Model Type
MFC (Multi Function Camera)	Horizontal Center Position
MFC (Multi Function Camera)	Vertical Center Position
MFC (Multi Function Camera)	Warning Start Velocity
MFC (Multi Function Camera)	Delay Velocity for Entering Low Speed Range
MFC (Multi Function Camera)	LDWS Warning Duration
MFC (Multi Function Camera)	Warning Threshold Right Step
MFC (Multi Function Camera)	Warning Threshold Left Step
MFC (Multi Function Camera)	Delay Time to Decide Haptic Warning With White Lane
MFC (Multi Function Camera)	Delay Time for Warning Turn Off
MFC (Multi Function Camera)	Status of Calibration Procedure Execution
MFC (Multi Function Camera)	Status of Inline Test Mode Result
MFC (Multi Function Camera)	Status of Local Setting
MFC (Multi Function Camera)	Status of Handle Side Setting

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
MFC (Multi Function Camera)	LDWS RP Calibration
MLM (Mood Lamp Module)	Variant Coding
M-MEDIA (Multimedia)	Variant Coding
MOZEN	ECU Serial Number
OBC (On Board Charger)	Variant Coding for Charging Port
OCS (Occupant Classification System)	Body Sensor Reset
OCS (Occupant Classification System)	Zero Re-calibration of Occupant Classification Sensor
OCS (Occupant Classification System)	PODS Reset
ODS (Occupant Detection Sensor)	Zero Re-calibration of Occupant Classification Sensor
ODS (Occupant Detection System)	WCS Reset
ODS (Occupant Detection System)	PODS Reset
OPTION (User Option)	Horn Answer Back (+RK) Option
OPTION (User Option)	User Option - Arm/Disarm By Key (+RK)
OPTION (User Option)	User Option - Auto Door Lock (+RK)
OPTION (User Option)	User Option - Seat Linkage Options
OPTION (User Option)	User Option - Steering Column Options
OPTION (User Option)	Power Tail Gate Option
PA (Parking Assist)	SPAS Variant Coding
PDM (Power Distribution Module)	ESCL Open Status Check
PFSU (Power Folding Seat Unit)	Seat Limit Position Setting
PGS (Dynamic Guideline Camera)	Camera image correction function
PGS (Parking Guide System)	Camera image correction function
PSB (Pre-safe Seat Belt)	PSB Variant Coding
PSB-L (Pre-safe Seat Belt-Left)	PSB Variant Coding
PSB-R (Pre-safe Seat Belt-Right)	PSB Variant Coding
PSD (Power Sliding Door)	User Option
PSM (Power Seat Module)	Seat Limit Position Setting
PSM (Power Seat Module)	HeadRest Setting
PSM (Power Seat Module)	User Option
PSM-RL (Power Seat Module-Rear Left)	Seat Limit Position Setting
PSM-RR (Power Seat Module-Rear Right)	Seat Limit Position Setting
PTG (Power Tail Gate)	Power Tailgate Mode Configuration
PTM (Power Trunk Module)	Power Trunk Mode Configuration
RDC (Rear Door Curtain)	Rear Curtain Limit Position Setting
RLPSU (Rear Left Power Seat Unit)	Seat Limit Position Setting
RR_C_RADAR (Corner Radar)	BCW (BSD) Radar Calibration
RR_C_RADAR (Corner Radar)	Variant Coding
RR_C_RADAR (Corner Radar)	Variant Coding (BackUp and Input)
RR_C_RADAR (Rear Corner Radar)	BCW (BSD) Radar Calibration
RR_C_RADAR (Rear Corner Radar)	Variant Coding
RR_C_RADAR (Rear Corner Radar)	Variant Coding (BackUp and Input)
RR_C_RADAR_L (Rear Corner Radar-Left)	BCW (BSD) Radar Calibration
RR_C_RADAR_L (Rear Corner Radar-Left)	Variant Coding
RR_C_RADAR_L (Rear Corner Radar-Left)	Variant Coding (BackUp and Input)
RR_C_RADAR_R (Rear Corner Radar-Right)	BCW (BSD) Radar Calibration
RR_C_RADAR_R (Rear Corner Radar-Right)	Variant Coding
RR_C_RADAR_R (Rear Corner Radar-Right)	Variant Coding (BackUp and Input)
RRPSU (Rear Right Power Seat Unit)	Seat Limit Position Setting
RSPA (Remote Smart Parking Assist)	SPAS Variant Coding
RSPA (Remote Smart Parking Assist)	Camera image correction function
RVM (Rear View Monitor)	Camera image correction function
SCC (Smart Cruise Control)	Radar Sensor Alignment (SCC/AEB)
SCC (Smart Cruise Control)	Variant Coding
SCCAEB (SCC/AEB)	Radar Sensor Alignment (SCC/AEB)
SCCAEB (SCC/AEB)	Variant Coding
SCM (Steering Column Module)	User Option - Steering Easy Access
SCM (Steering Column Module)	Steering Limit Position Setting
SCR (Selective Catalytic Reduction)	Initialization of Urea Pump Pressure Value
SCR (Selective Catalytic Reduction)	Initialization of Urea Solution System Information
SCR (Selective Catalytic Reduction)	Initialization of Urea Solution Injector Temperature
SCR (Selective Catalytic Reduction)	Initialization of Urea Solution Spraying Integration Value
SCR (Selective Catalytic Reduction)	Initialization of Remaining Urea Solution
SCR (Selective Catalytic Reduction)	Initialization of Current Value For Urea Solution Pump Coil
SCR (Selective Catalytic Reduction)	Initialization of Urea Solution Spraying Amount Learning Value
SCR (Selective Catalytic Reduction)	Initialization of Level of Ammonia In Catalyst
SCR (Selective Catalytic Reduction)	Urea solution collection test
SCR (Selective Catalytic Reduction)	Urea solution collection pump test
SCR (Selective Catalytic Reduction)	Urea solution leak test
SCR (Selective Catalytic Reduction)	Urea solution pressure ready test
SCR (Selective Catalytic Reduction)	Urea solution spraying amount test
SCR (Selective Catalytic Reduction)	Urea solution static spraying test

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
SCR (Selective Catalytic Reduction)	Urea solution dynamic spraying test
SCR (Selective Catalytic Reduction)	Urea solution Small quantity spraying test
SCR (Selective Catalytic Reduction)	Initial filling of urea solution
SCR (Selective Catalytic Reduction)	Urea tank replacement
SCR (Selective Catalytic Reduction)	Urea pump replacement
SCR (Selective Catalytic Reduction)	Urea injector replacement
SCR (Selective Catalytic Reduction)	DCU replacement
SCR (Selective Catalytic Reduction)	Urea line replacement
SCR (Selective Catalytic Reduction)	Wiring replacement
SCU (SBW Control Unit (SCU))	Clear Learning Value
SDC (Solar DCDC Converter)	Solar roof output test
SDC (Solar DCDC Converter)	Service Reminder Setting
SERVICE (Service Reminder)	Service Reminder Setting
SJB (Smart Junction Block)	User Option
SJB (Smart Junction Block)	Battery Discharge Alarm History
SMK (Smart Key Unit)	Current FOB Key Check
SMK (Smart Key Unit)	ECM Neutralization
SMK (Smart Key Unit)	SMK Neutralization
SMK (Smart Key Unit)	SMK Status Information
SMK (Smart Key Unit)	FOB KEY Status Information
SMK (Smart Key Unit)	Smart Key Code Saving
SMK (Smart Key Unit)	Interior Antenna 1 - Check
SMK (Smart Key Unit)	Interior Antenna 2 - Check
SMK (Smart Key Unit)	Trunk Antenna (Sedan Only) - Check
SMK (Smart Key Unit)	Interior Antenna 3 (RV/Hatchback Only) - Check
SMK (Smart Key Unit)	Bumper/Tailgate Antenna - Check
SMK (Smart Key Unit)	Driver Door Handle Antenna - Check
SMK (Smart Key Unit)	Passenger Door Handle Antenna - Check
SMK (Smart Key Unit)	Hat Shelf Antenna - Check
SMKCODE (Smart Key Code Saving)	Smart Key Code Saving
SPAS (Smart Parking Assist System)	SPAS Variant Coding
SVMS (Surround View Monitor)	AVM Tolerance compensation - Auto
SVMS (Surround View Monitor)	AVM Calibration
SVMS (Surround View Monitor)	MCS Tolerance compensation Auto
SVMS (Surround View Monitor)	MCS Calibration
TCS (Traction Control System)	HCU Air Bleeding Mode
TPMS (Tire Pressure Monitoring System)	TPMS Variant Coding
TPMS (Tire Pressure Monitoring System)	Tire Pressure Save (SET)
TPMS (Tire Pressure Monitoring System)	Wheel Sensor ID Writing
TPMS (Tire Pressure Monitoring System)	VIN Writing
TPMS (Tire Pressure Monitoring System)	Vehicle Name Writing
TPMS (Tire Pressure Monitoring System)	TPMS Reception Rate Measuring Mode
TUNER_AMP (Tuner/Amplifier)	ECU Serial Number
TV	ECU Serial Number
VCMS (Vehicle Charging Management System)	inlet drive function
VCU (Vehicle Control System)	Read VIN
VCU (Vehicle Control System)	Write VIN
VCU (Vehicle Control System)	Reset of Learning Data of Available Distance for Driving
VCU (Vehicle Control System)	SCU Parking Application Test
VCU (Vehicle Control System)	SCU Parking Canceling Test
VCU (Vehicle Control System)	Deactivate Factory Mode
VCULDC	Read VIN
VCULDC	Write VIN
VCULDC	LDC Activation Test
VCULDC	Reset of Learning Data of Available Distance for Driving
VCULDC	SCU Parking Application Test
VCULDC	SCU Parking Canceling Test
VDC (Vehicle Dynamic Control)	HCU Air Bleeding Mode
VDC (Vehicle Dynamic Control)	Auto Detected Configuration Reset (ESC Only)
VDC (Vehicle Dynamic Control)	Longitudinal G Sensor Calibration (HAC/DBC Only)
VDC (Vehicle Dynamic Control)	Steering Angle Sensor (SAS) Calibration
VDC (Vehicle Dynamic Control)	ESC Variant Coding
VDC (Vehicle Dynamic Control)	Variant Coding
VDCAHB (Brake)	HCU Air Bleeding Mode
VDCAHB (Brake)	Auto Detected Configuration Reset (ESC Only)
VDCAHB (Brake)	Longitudinal G Sensor Calibration (HAC/DBC Only)
VDCAHB (Brake)	Pressure Sensor Calibration
VDCAHB (Brake)a	Pedal Travel Sensor (PTS) Calibration
VDCAHB (Brake)	Brake Pad Change Mode
VDCAHB (Brake)	Assembly Check (ECU replacement)
VDCAHB (Brake)	High Pressure Release Mode

●ヒョンデ 作業サポート (Ver 2023.10)

システム名	項目名
VDCAHB (Brake)	Forced circulation mode
VRS (Voice Recognition System)	ECU Serial Number