

●ヒョンデ 作業サポート (Ver 2024.06)

システム名	項目名
4WD (4WD Control)	Clutch Learning Read
4WD (4WD Control)	Clutch Learning Write
4WD (4WD Control)	Adaptive Value BackUp and Input (ECU replacement)
4WD (4WD Control)	Adaptive Value BackUp and Input (ECU and Transfer Assy replacement)
4WD (4WD Control)	Air Bleeding Mode
4WD (4WD Control)	Clutch Learning Reset
4WD (4WD Control)	Clutch Learning Read
4WD (4WD Control)	Clutch Learning Write
4WD (4WD Control)	Initialize 4WD ECU
4WD (4WD Control)	T/C Clutch Calibration
4WD (4WD Control)	Power Down Calibration
4WD (4WD Control)	HW Characteristics
4WD (4WD Control)	Torque Coupling
4WD (4WD Control)	4WD Lamp
4WD (4WD Control)	Oil Data Initialization
4WD (4WD Control)	AWD Mode Selection
4WD (4WD Control)	HCU Air Bleeding Mode
4WD (4WD Control)	Variant coding
4WD (4WD Control)	Initialize 4WD ECU
AAF-R (Active Air Flap-Right)	HCU Air Bleeding Mode
ABS (Anti-Lock Brake)	Auto Detected Configuration Reset (ESC Only)
ABS (Anti-Lock Brake)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABS (Anti-Lock Brake)	Solenoid Valve Test - FL Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - FR Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - RL Solenoid Valve
ABS (Anti-Lock Brake)	Solenoid Valve Test - RR Solenoid Valve
ABS (Anti-Lock Brake)	HCU Air Bleeding Mode
ABS (Anti-Lock Brake)	Steering Angle Sensor (SAS) Calibration
ABS (Anti-Lock Brake)	ESC Variant Coding
ABS (Anti-Lock Brake)	Brake Pad Change Mode
ABS (Anti-Lock Brake)	Assembly Check (ECU replacement)
ABS (Anti-Lock Brake)	Auto Variant Coding
ABS (Anti-Lock Brake)	Variant Coding (BackUp and Input)
ABS (Anti-Lock Brake)	Wheel Rear Right
ABS (Anti-Lock Brake)	Wheel Rear Left
ABS (Anti-Lock Brake)	Wheel Front Right
ABS (Anti-Lock Brake)	Wheel Front Left
ABS (Anti-Lock Brake)	HCU Air Bleeding Mode
ABSESC (ABS/ESC)	Auto Detected Configuration Reset (ESC Only)
ABSESC (ABS/ESC)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSESC (ABS/ESC)	Steering Angle Sensor (SAS) Calibration
ABSESC (ABS/ESC)	Variant Coding
ABSESC (ABS/ESC)	Variant Coding (BackUp and Input)
ABSESC (ABS/ESC)	ESC Variant Coding
ABSESC (ABS/ESC)	Deactivate factory mode
ABSESC (ABS/ESC)	Assembly Check (ECU replacement)
ABSESC (ABS/ESC)	Change Mode of DIH and MoD actuator
ABSESC (ABS/ESC)	Brake Pad Change Mode
ABSESC (ABS/ESC)	Solenoid Valve Test - FL Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - FR Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - RL Solenoid Valve
ABSESC (ABS/ESC)	Solenoid Valve Test - RR Solenoid Valve
ABSESC (ABS/ESC)	Pressure Sensor Calibration
ABSESC (ABS/ESC)	Pedal Travel Sensor (PTS) Calibration
ABSESC (ABS/ESC)	Forced circulation mode
ABSESC (ABS/ESC)	High Pressure Release Mode
ABSESC (ABS/ESC)	Fluid Circulation Mode
ABSESC (ABS/ESC)	EPB Apply/Release Function
ABSESC (ABS/ESC)	HCU Air Bleeding Mode
ABSESC (ABS/ESC)	Auto Detected Configuration Reset (ESC Only)
ABSESC (ABS/ESC)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSESC (ABS/ESC)	Steering Angle Sensor (SAS) Calibration
ABSESC (ABS/ESC)	ESC Variant Coding
ABSESC (ABS/ESC)	Variant Coding (BackUp and Input)
ABSESC (ABS/ESC)	Pressure Sensor Calibration
ABSESC (ABS/ESC)	EPB Apply/Release Function
ABSESC (ABS/ESC)	Pedal Travel Sensor (PTS) Calibration
ABSESC (ABS/ESC)	Brake Pad Change Mode
ABSESC (ABS/ESC)	HCU Air Bleeding Mode
ABSVDC (Brake)	Air Bleeding Mode
ABSVDC (Brake)	Assembly Check (ECU replacement)
ABSVDC (Brake)	Auto Detected Configuration Reset (ESC Only)
ABSVDC (Brake)	Calibration of AX Sensor - Only ESC
ABSVDC (Brake)	Change Mode of DIH and MoD actuator
ABSVDC (Brake)	Deactivate factory mode
ABSVDC (Brake)	EPB Variant Coding
ABSVDC (Brake)	Forced circulation mode
ABSVDC (Brake)	HAC/BLA/G Sensor Calibration
ABSVDC (Brake)	HCU Air Bleeding Mode
ABSVDC (Brake)	Hill start Assist Control Setting
ABSVDC (Brake)	Longitudinal G Sensor Calibration (HAC/DBC Only)
ABSVDC (Brake)	Optional Variant coding (AT)
ABSVDC (Brake)	Optional Variant coding (MT)
ABSVDC (Brake)	Optional Variant coding+AEBS (AT)
ABSVDC (Brake)	Optional Variant coding+AEBS (MT)
ABSVDC (Brake)	Pedal Travel Sensor (PTS) Calibration