

●MG 作業サポート (Ver 2024.06)

システム	項目名
ECM	ECM Adaption Reset
ECM	Reset Throttle Adaption value
ECM	Starter Start Stop Time Reset
ECM	Write Battery ID
ECM	ECM Self-Learning Value Reset
ECM	Electronic Throttle Self Learning
ECM	ECM Self-Learning Value Reset
ECM	Electronic Throttle Self Learning
ECM	Starter start stop time reset
ECM	GPF Adaption Reset (force regen)
ECM	GPF Ash Data Reset (set values in ECM)
ECM	GPF Learned Values Reset
ECM	GPF Pressure Sensor Adapted Value Reset
ECM	Mixture Adaptions Reset
TCM	Reset TCM EEPROM
TCM	TCM Self-learning
TCM	Read SubROM
TCM	Transmission Sensor Test
TCM	TCM Neutral Position Self Learn
ABS/SCS	YAW Sensor Calibration
ABS/SCS	ABS/SCS Brake Bleeding
ABS/SCS	SCS Pressure Sensor Calibration
ABS/SCS	Parking Brake System Component Replacement
ABS/SCS	Electric Parking Brake
BCM	BCM Power Mode Adjustment
BCM	BCM Power Mode Adjustment
BCM	Write Battery ID
BCM	Brake Pedal Position Sensor Calibration
SAS	SAS De-calibration
SAS	SAS Calibration
IPK	Service Interval Reset
IPK	IPK Selftest
IPK	Service Interval Announcement Reset
IPK	IPK combination meter image processor program upgrade
HVAC (エアコン)	A/C Control Motor Position Self-learning
TPMS (タイヤ空気圧モニタリングシステム)	TPMS Sensor ID Learning
ICM	Service Interval Announcement Reset
ICM	IPK Selftest
ICM	Service Interval Reset
EPS	EPS Calibration
AC	ATC Motor Calibration
T-BOX	Unlock TBOX Bluetooth OTA
T-BOX	TBOX Restart
T-BOX	The T-BOX OTA and Bluetooth Lock Opened
T-BOX	Activate TBOX
GW	GW Brake Sensor Zero-Point Learning
GW	Write Battery ID
GW	GW Power Mode Adjustment
ETC	A/C Control Motor Position Self-learning
VCU	Electric Drive Transmission Coolant Bleed/Refill
VCU	P Position Calibration
EPB	EPB Release
EPB	EPB Apply
EPB	EPB Brake Cable Adjustment

●MG 作業サポート (Ver 2024.06)

システム	項目名
EPB	EPB Brake Cable Fully Release
EPB	Parking Brake System Component Replacement
EPB	Release EPB Both Actuators
EPB	Release EPB Left Actuator
EPB	Release EPB Right Actuator
EPB	Apply EPB Both Actuators
EPB	Apply EPB Left Actuator
EPB	Apply EPB Right Actuator
EPB	EPB Current Sensor Calibration
TC	Electric Drive Transmission Coolant Bleed/Refill
TC	TM Offset Angle Calibration
SCU	SCU Actuator Learn
SCU	SCU Erase Calibration
FVCM	Front View Camera Module Calibration
FDR	Front Detective Radar Calibration
PEPS	PEPS Power Mode Adjustment
AVM	AVM Calibration
EMS	ECM Adaption Reset
EMS	ECM Throttle adaption value self learning
ISC	ISG offset angle calibration
ISC	Accelerate ISG to defined speed
ISC	Electric Drive Transmission Coolant Bleed/Refill
HCU	HCU System Electromagnet Clear
HCU	Clutch EOL Parameters Self-learning
HCU	Gearbox EOL Reference Search
HCU	Gearbox EOL Parameters Self-learning
HCU	Clean up Gearbox Parameter
HCU	Clean up Clutch Parameter
HCU	Clean up Gearbox EOL Reference Parameter
HCU	Fast Adaptive Driving Operation
FVCM/FDR	Front View Camera Module Calibration
FVCM/FDR	Front Detective Radar Calibration
FVCM/FDR	Query Front View Camera Calibration Result
FVCM/FDR	Query Front Detection Radar Calibration Result
SCS	YAW Sensor Calibration
SCS	SCS Pressure Sensor Calibration
SCS	Parking Brake System Component Replacement
SCS	ABS/SCS Refill/Bleeding
SCS	Release EPB Both Actuators
SCS	Release EPB Left Actuator
SCS	Release EPB Right Actuator
SCS	Apply EPB Both Actuators
SCS	Apply EPB Left Actuator
SCS	Apply EPB Right Actuator
SCS	iTPMS Reset
DHL	DHL Axle Sensor Zero Position Learning
TCCM	TCCM On-Demand Self Test
PLCM	Electric Tailgate Self-learning
SCS/EPB	YAW Sensor Calibration
SCS/EPB	Parking Brake System Component Replacement
SCS/EPB	ABS/SCS Refill/Bleeding
インストルメントパネルクラスター	Service Interval Announcement Reset
インストルメントパネルクラスター	Service Interval Announcement Reset