

●フォードヨーロッパ 対応システム (Ver 2024.10)

システム	自己診断	データ表示	アクティブテスト	作業サポート	識別情報表示
4WAS (Air Suspension)	●	●	●		
4X4 (4x4 Control Module)	●	●	●		
ABS (Anti-Lock Brake System)	●	●	●	●	●
ABS/TCS (Anti-Lock Brake/Traction Control Module)	●	●	●	●	
ACCM (Air Conditioning Control Module)	●	●			●
ACM (Audio Control Module)	●	●	●	●	●
ACM (Audio Front Control Module)	●	●			●
AHCM (Auxiliary Heater Control Module)	●	●	●	●	●
APIM (Accessory Protocol Control Module)	●	●			●
APIM (Accessory Protocol Interface Module)	●	●	●	●	●
APIM (SYNC Module)	●	●			●
ARC (Automatic Ride Control)	●	●	●		
ASM (Auto Shift Manual)	●	●			
ATCM (All Terrain Control Module)	●	●			●
AWD (All Wheel Drive Module)	●	●			●
BCM (Battery Charger Control Module)	●	●			
BCM (Body Control Module)	●	●	●	●	●
BCM-B (Body Control Module B)	●	●	●		●
BCMC (Body Control Module C)	●	●			●
BCMii (Body control module)	●	●	●	●	●
BECM (Battery Energy Control Module)	●	●	●		●
BECMB (Battery Energy Control Module B)	●	●			●
BECM-B (Battery Energy Control Module B)	●	●	●		●
BEM (Body Electronic Module)	●	●	●		
CCM (Cruise Control Module)	●	●			●
C-CM (Cruise Control Module)	●	●	●	●	●
CCMii (Cruise Control Module)	●	●	●	●	●
CDIM (Circuit Deactivation Ignition Module)	●	●			
CDP (Compact Disc Player)	●	●		●	
CLM (Column Lock Module)	●	●			●
CMR (Camera Module Rear)	●	●		●	●
CSM (Central Security Module)	●	●	●	●	
CTMii (Convergence Telematics Module)	●				
D_DCU (Driver Door Control Unit)	●	●	●	●	
DABM (Digital Audio Broadcast Module)	●				
DACM-C (Digital Audio Control Module C)	●	●		●	●
DCDC (DC to DC Convertal Control Module)	●	●	●		●
DCDC (DC to DC Converter Control Module)	●	●	●		●
DCDC (Direct Current/direct Current Converter Control Module)	●	●			●
DGSM (Driver-Dual Climate Control Seat Module)	●	●	●		
DDM (Driver Door Module)	●	●			●
DDM (Driver's Door Module)	●	●	●	●	●
DSM (Driver Front Seat Module)	●	●			●
DSM (Driver Seat Module)	●	●	●		
DSM (Driver's Seat Module)	●	●	●		●
DSP (Audio Digital Signal Processing Module)	●	●			●
DSP (Digital Signal Processing Module)	●	●	●	●	●
EATC (Electronic Automatic Temperature Control)	●	●	●	●	●
ECS (Electronic Crash Sensor)	●	●			
EPB (Electronic Parking Brake)	●	●			
EPS (Electronic Power Steering)	●	●			
FACM (Fuel Additive Control Module)	●	●		●	
FCDIM (Front Control/Display Interface Module)	●	●	●	●	●
FCIM (Front Controls Interface Module)	●	●	●		●
FCIM-B (Front Controls Interface Module B)	●	●			●

●フォードヨーロッパ 対応システム (Ver 2024.10)

システム	自己診断	データ表示	アクティブテスト	作業サポート	識別情報表示
FDIM (Front Display Interface Module)	●	●	●		
FDSM (Front Distance Sensing Module)	●	●		●	●
FFH (Fuel Fired Coolant Heating Module)	●	●	●	●	
FLM (Front Lighting Control Module)	●	●			●
FOH (Fuel Operated Heater)	●	●			
GDM (Generic Display Module)	●	●		●	
GEM (Generic Electronic Module)	●	●	●	●	
GEM/SJB (Generic Electronic Module/Smart Junction Box)	●	●	●		
GFM (Generic Function Module)	●	●	●	●	●
GFM-2 (Generic Function Module 2)	●				
GPSM (Global Positioning System Module)	●	●		●	●
GSM (Gear Shift Module)	●	●			●
GWM (Gateway Module A)	●	●		●	●
HCM (Headlamp Control Module)	●	●	●	●	●
HCM-2 (Headlamp Control Module 2)	●	●			
HEC (Hybrid Electrical Cluster)	●	●	●	●	
HIM (HVAC Intergrated Module)	●	●			
HSWM (Heated Steering Wheel Module)	●	●	●		●
HUD (Head Up Display)	●	●			●
HVAC (Heating Ventilation Air Conditioning)	●	●	●	●	●
HVAC (Heating Ventilation And Air Conditionin g)	●	●			●
IAB (Integrated Air Bag Module)	●	●		●	
IC (Instrument Cluster)	●	●	●	●	●
ICM (Information Center Module)	●	●	●		●
ILCM (Interior Lighting Control Module)	●	●	●		
IPC (Instrument Panel Cluster)	●	●			●
IPC (Instrument Panel Control Module)	●	●	●	●	●
IPMA (Image Processing Module A)	●	●			●
IPM-A (Image Processing Module A)	●	●		●	●
IPM-B (Image Processing Module B)	●	●	●	●	●
LHID (Left High Intensity Discharge Lamp)	●	●	●		
LTM (Liftgate/Trunk Module)	●	●			
MC (Message Center)	●	●	●		
MRCM-A (Movable Roof Control Module A)	●	●			●
MRCM-B (Movable Roof Control Module B)	●	●			●
NAV (Navigation System)	●	●		●	
OCSM (Occupant Classification System Module)	●	●		●	●
OTC (Overhead Trip Computer)	●	●			
P_DCU (Passenger Door Control Unit)	●	●		●	
PACM (Pedestrian Alert Control Module)	●	●			●
PAM (Parking Aid Module)	●	●	●	●	●
PAM (Parking Assist Control Module)	●	●			●
Passive Antitheft	●	●	●		
PATS (Passive Anti Theft System)	●	●	●		
PBM (Parking Brake Control Module)	●	●			●
PCM (PowerTrain Control Module)	●	●	●	●	●
PDM (Passenger Door Module)	●	●			●
PDM (Passenger's Door Module)	●	●	●	●	●
PRB (Power Running Board)	●	●	●		
PSCM (Power Steering Control Module)	●	●		●	●
RACM (Rear Audio Control Module)	●	●			●
RAP (Remote Anti-Theft/Personality Module)	●	●	●	●	
RASM (Rear Air Suspension Module)	●	●			
RBM (Running Board Control Module)	●	●			●
RBM (Running Module Control Module)	●				

●フォードヨーロッパ 対応システム (Ver 2024.10)

システム	自己診断	データ表示	アクティブテスト	作業サポート	識別情報表示
RCM (Restraint Control Module)	●	●	●	●	●
RCM (Restraints Control Module)	●	●			●
RCU (Audio Rear Control Unit)	●	●	●		
RDCM (Reductant Control Module)	●	●	●		●
REM (Rear Electronic Module)	●	●	●	●	
RETM (Rear Entertainment Module)	●	●		●	
RFA (Remote Function Actuator)	●	●	●	●	●
RGTM (Rear Gate/Trunk Module)	●	●	●	●	●
RHID (Right High Intensity Discharge Lamp)	●	●			
RHVAC (Rear Heating Ventilation Air Conditioning)	●	●			●
RIM (Remote Immobilizer Module)	●	●	●		
RKE (Remote Keyless Entry)	●	●		●	
RL_DCU (Rear Left Door Control Unit)	●	●		●	
RLCM-A (Rear Lighting Control Module A)	●	●			●
RR_DCU (Rear Right Door Control Unit)	●	●		●	
RTM (Radio Transceiver Module)	●	●			●
SASM (Steering Angle Sensor Module)	●	●		●	●
SCCM (Steering Column Control Module)	●	●	●	●	●
SCM-E (Seat Control Module E)	●	●	●		●
SCM-G (Seat Control Module G)	●	●			●
SCM-H (Seat Control Module H)	●	●	●		●
SDARS (Satellite Digital Audio Receiver System)	●	●	●		
SECM (Steering Effort Control Module)	●	●			●
SOBDM (Secondary OBD Control Module A)	●	●	●	●	●
SOBDM-C (Secondary OBD Control Module C)	●	●	●	●	●
SOBDMC (Secondary On-Board Diagnostic Control Module C)	●	●			●
SOD-L (Side Obstacle Detection Control Module Left)	●	●	●	●	●
SODL (Side Obstacle Detection Control Module LH)	●	●			●
SODR (Side Obstacle Detection Control Module RH)	●	●			●
SOD-R (Side Obstacle Detection Control Module Right)	●	●	●	●	●
SRM (Speech Recognition Module)	●	●		●	●
TBC (Trailer Brake Control Module)	●	●			
TBM (Tracking And Blocking Module)	●	●		●	●
TCCM (Transfer Case Control Module)	●	●	●		●
TCM (Transmission Control Module)	●	●	●	●	●
TCU (Telematic Control Unit Module)	●	●	●	●	●
TPM (Tire Pressure Monitor)	●	●			●
TRCM (Transmission Range Control Module)	●	●			●
TRM (Trailer Module)	●	●	●	●	●
VDM (Vehicle Dynamic Module)	●	●	●		
VSM (Vehicle Security Module)	●	●	●		
WACM (Wireless Accessory Charging Module)	●	●			●