

●ヒョンデ 作業サポート (Ver 2024.10)

| システム名 | 項目名 |
|-------------------------------|---|
| 4WD (4WD Control) | Clutch Learning Read |
| 4WD (4WD Control) | Clutch Learning Write |
| 4WD (4WD Control) | Adaptive Value BackUp and Input (ECU replacement) |
| 4WD (4WD Control) | Adaptive Value BackUp and Input (ECU and Transfer Assy replacement) |
| 4WD (4WD Control) | Air Bleeding Mode |
| 4WD (4WD Control) | Clutch Learning Reset |
| 4WD (4WD Control) | Clutch Learning Read |
| 4WD (4WD Control) | Clutch Learning Write |
| 4WD (4WD Control) | Initialize 4WD ECU |
| 4WD (4WD Control) | T/C Clutch Calibration |
| 4WD (4WD Control) | Power Down Calibration |
| 4WD (4WD Control) | HW Characteristics |
| 4WD (4WD Control) | Torque Coupling |
| 4WD (4WD Control) | 4WD Lamp |
| 4WD (4WD Control) | Oil Data Initialization |
| 4WD (4WD Control) | AWD Mode Selection |
| 4WD (4WD Control) | HCU Air Bleeding Mode |
| 4WD (4WD Control) | Variant coding |
| 4WD (4WD Control) | Initialize 4WD ECU |
| AAF-R (Active Air Flap-Right) | HCU Air Bleeding Mode |
| ABS (Anti-Lock Brake) | Auto Detected Configuration Reset (ESC Only) |
| ABS (Anti-Lock Brake) | Longitudinal G Sensor Calibration (HAC/DBC Only) |
| ABS (Anti-Lock Brake) | Solenoid Valve Test - FL Solenoid Valve |
| ABS (Anti-Lock Brake) | Solenoid Valve Test - FR Solenoid Valve |
| ABS (Anti-Lock Brake) | Solenoid Valve Test - RL Solenoid Valve |
| ABS (Anti-Lock Brake) | Solenoid Valve Test - RR Solenoid Valve |
| ABS (Anti-Lock Brake) | HCU Air Bleeding Mode |
| ABS (Anti-Lock Brake) | Steering Angle Sensor (SAS) Calibration |
| ABS (Anti-Lock Brake) | ESC Variant Coding |
| ABS (Anti-Lock Brake) | Brake Pad Change Mode |
| ABS (Anti-Lock Brake) | Assembly Check (ECU replacement) |
| ABS (Anti-Lock Brake) | Auto Variant Coding |
| ABS (Anti-Lock Brake) | Variant Coding (BackUp and Input) |
| ABS (Anti-Lock Brake) | Wheel Rear Right |
| ABS (Anti-Lock Brake) | Wheel Rear Left |
| ABS (Anti-Lock Brake) | Wheel Front Right |
| ABS (Anti-Lock Brake) | Wheel Front Left |
| ABS (Anti-Lock Brake) | HCU Air Bleeding Mode |
| ABSESC (ABS/ESC) | Auto Detected Configuration Reset (ESC Only) |
| ABSESC (ABS/ESC) | Longitudinal G Sensor Calibration (HAC/DBC Only) |
| ABSESC (ABS/ESC) | Steering Angle Sensor (SAS) Calibration |
| ABSESC (ABS/ESC) | Variant Coding |
| ABSESC (ABS/ESC) | Variant Coding (BackUp and Input) |
| ABSESC (ABS/ESC) | ESC Variant Coding |
| ABSESC (ABS/ESC) | Deactivate factory mode |
| ABSESC (ABS/ESC) | Assembly Check (ECU replacement) |
| ABSESC (ABS/ESC) | Change Mode of DIH and MoD actuator |
| ABSESC (ABS/ESC) | Brake Pad Change Mode |
| ABSESC (ABS/ESC) | Solenoid Valve Test - FL Solenoid Valve |
| ABSESC (ABS/ESC) | Solenoid Valve Test - FR Solenoid Valve |
| ABSESC (ABS/ESC) | Solenoid Valve Test - RL Solenoid Valve |
| ABSESC (ABS/ESC) | Solenoid Valve Test - RR Solenoid Valve |
| ABSESC (ABS/ESC) | Pressure Sensor Calibration |
| ABSESC (ABS/ESC) | Pedal Travel Sensor (PTS) Calibration |
| ABSESC (ABS/ESC) | Forced circulation mode |
| ABSESC (ABS/ESC) | High Pressure Release Mode |
| ABSESC (ABS/ESC) | Fluid Circulation Mode |
| ABSESC (ABS/ESC) | EPB Apply/Release Function |
| ABSESC (ABS/ESC) | HCU Air Bleeding Mode |
| ABSESC (ABS/ESC) | Auto Detected Configuration Reset (ESC Only) |
| ABSESC (ABS/ESC) | Longitudinal G Sensor Calibration (HAC/DBC Only) |
| ABSESC (ABS/ESC) | Steering Angle Sensor (SAS) Calibration |
| ABSESC (ABS/ESC) | ESC Variant Coding |
| ABSESC (ABS/ESC) | Variant Coding (BackUp and Input) |
| ABSESC (ABS/ESC) | Pressure Sensor Calibration |
| ABSESC (ABS/ESC) | EPB Apply/Release Function |
| ABSESC (ABS/ESC) | Pedal Travel Sensor (PTS) Calibration |
| ABSESC (ABS/ESC) | Brake Pad Change Mode |
| ABSESC (ABS/ESC) | HCU Air Bleeding Mode |
| ABSVDC (Brake) | Air Bleeding Mode |
| ABSVDC (Brake) | Assembly Check (ECU replacement) |
| ABSVDC (Brake) | Auto Detected Configuration Reset (ESC Only) |
| ABSVDC (Brake) | Calibration of AX Sensor - Only ESC |
| ABSVDC (Brake) | Change Mode of DIH and MoD actuator |
| ABSVDC (Brake) | Deactivate factory mode |
| ABSVDC (Brake) | EPB Variant Coding |
| ABSVDC (Brake) | Forced circulation mode |
| ABSVDC (Brake) | HAC/BLA/G Sensor Calibration |
| ABSVDC (Brake) | HCU Air Bleeding Mode |
| ABSVDC (Brake) | Hill start Assist Control Setting |
| ABSVDC (Brake) | Longitudinal G Sensor Calibration (HAC/DBC Only) |
| ABSVDC (Brake) | Optional Variant coding (AT) |
| ABSVDC (Brake) | Optional Variant coding (MT) |
| ABSVDC (Brake) | Optional Variant coding+AEBS (AT) |
| ABSVDC (Brake) | Optional Variant coding+AEBS (MT) |
| ABSVDC (Brake) | Pedal Travel Sensor (PTS) Calibration |